

RH25F Mechanical

11-21-02
Rev 5

Table Of Contents

Table Of Contents	iii
Manual Discrepancy Sheet	1
Parts Replacement Advice	1
Machine Base Assembly	2
Machine Table and Saddle Assembly	4
Machine Column Assembly	6
Machine Head Assembly	8
Spindle Motor and Pulley Assembly	10
Power Drawbar Cylinder Assembly	12
Pneumatic Schematic	14
Air Filter / Regulator / Lubricator Assembly	15
20 Pocket Rotary Tool Changer Assembly	16
20 Pocket Air Cylinder Assembly	18
20 Pocket ATC Top Cover Assembly	19
Pick and Place Tool Changer Assembly	20
Pick and Place Air Cylinder Assembly	22
Table Guard Assembly	24
Table Guard Assembly W/20 Pocket ATC	25
Flood Coolant Valve Handle Assembly	26
Lubrication Specifications	27
Retention Knob Chart	28
Maintenance Section	30
Adjusting Table Gib	30
Adjustment of Saddle Gib	30
Adjustment of head Bolster gib.	30
Checking and Adjusting Backlash	31
Procedure to adjust CESD (MA-219) Lubrication Unit	32
Adjusting tool change position	33
Spindle Start up Procedure	34

Manual Discrepancy Sheet

Parts Replacement Advice


Attention: When replacing parts on this machine note the following recent changes as of 11-21-02 new for Rev5.

RH25 F rev5: MO-127 for Y-axis motor, AM-159 Y-axis drive, PY-176 22mm bushing for motor.

Y-axis assembly

** RH25A - Always verify belt data

2

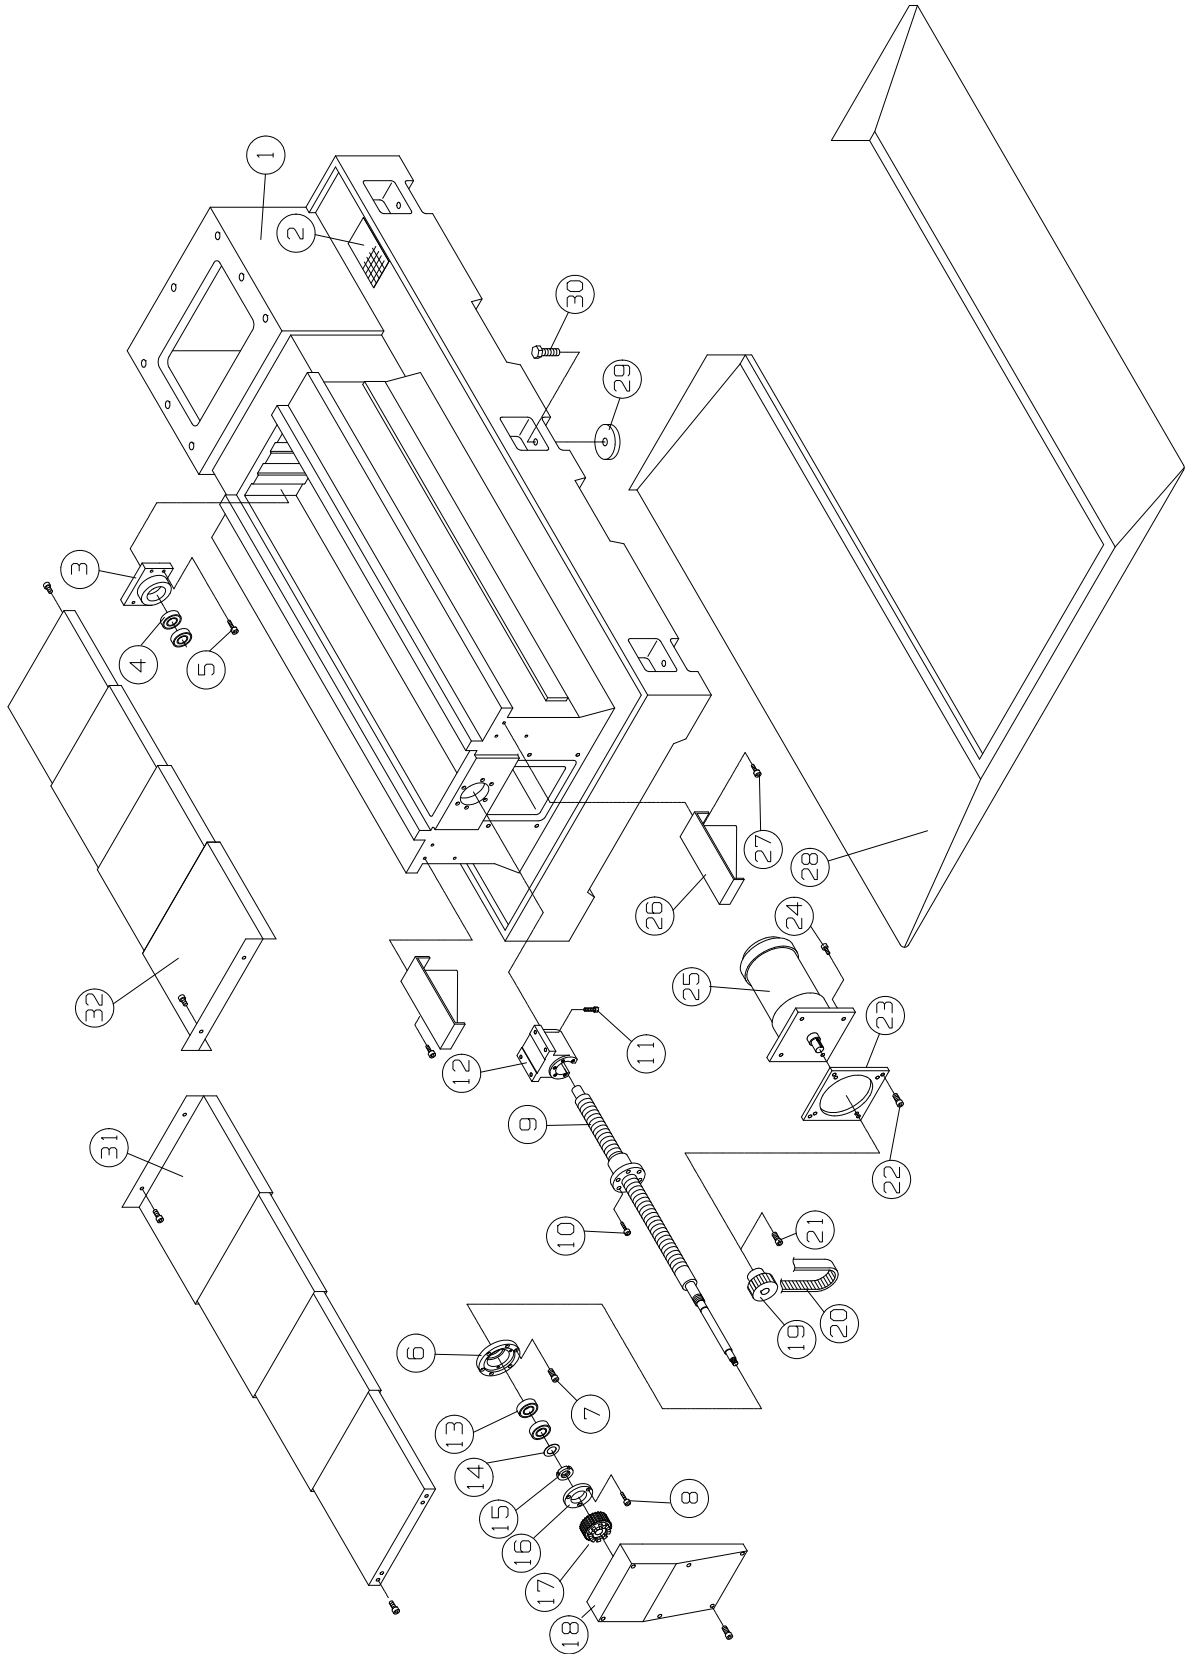

MB-25 a1

Machine Table and Saddle Assembly


X-Axis assembly

Item	Description	Q'ty	Remarks	Item	Description	Q'ty	Remarks
1	Table	1		21	Servo motor	1	See below
2	Way cover, left	1	MBB-140	22	Clamp plate	1	
	Way cover, right	1	MBB-141	23	Gib	1	MPS-650
3	Screw	10		24	Gib	2	
4	Cap	1		25	Screw	2	
5	Bearing bracket	1	MBC-106	26	Limit switch bracket	1	MPS-206
6	Bearing	2	BG-24	27	Clamp plate	1	
7	Gib	1	MBT-95	28	Screw	12	
8				29	Screw	2	
9	Ball screw	1	MBT-319 RH-25 MBT-097 RH-30	30	Fixed plate	2	
10	Ball screw nut	1		31	Nut	2	
11	Yoke	1		32	Nut	2	
12	Elbow joint	2		33	Nut	2	
13	Gib	1	MLT-101	34	Wiper	2	MPS-651
14				35	Saddle	1	
15	Gear box	1	MBT-103	36	Water groove	1	MPS-447
16	Bearing	2	BG-89	37	Drive Belt **	1	See below
17	Cap	1		38	Motor pulley	1	PY-174
18	Nut	1		39	Ballscrew pulley	1	PY-48
19	Motor bracket	4					
20	Cover	1			Not shown		
				40	Way cover spring		MPS-532
				41	Way cover bumper		WX-364
				42	Way wiper set		Not applicable
				43	Oil line		NU-325
				44	Home/Limit switch	1	SW-203

X axis AM-58

* Motor change			
RH25A	MO-118	DC	
RH30A-E	MO-94	Sigma1	
RH30F-J 2	MO-125	Sigma2	

** Belt change			
RH25A	BT-11 or BT-13		Verify belt number
RH25B-G	BT-13		
RH30	BT-13		

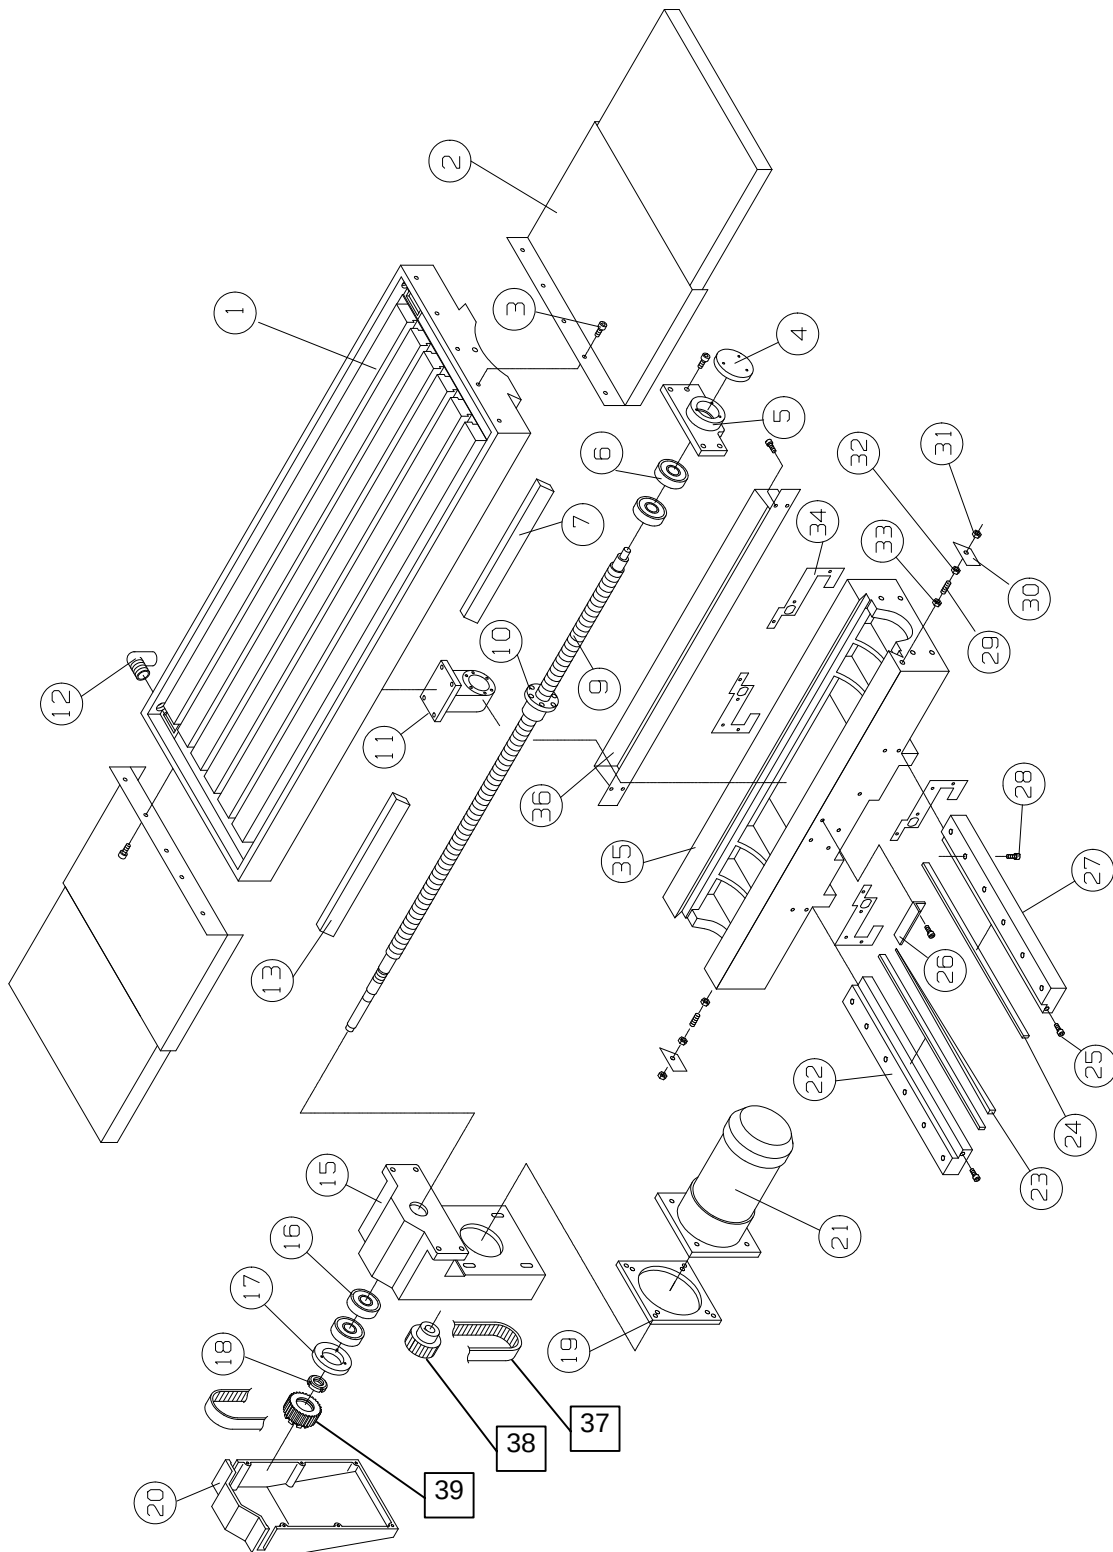

MB-25a3

Machine Column Assembly

Z-axis assembly

[15MB-25a2]


Item	Description	Q'ty	Remarks
1	Nut	1	
2	Washer	1	
3	Pulley	1	PY-165
4	Screw	4	
5	Bearing cap	1	
6	Spacer	1	
7	Bearing	2	BG-89
8	Bearing bracket	1	MBC-106
9	Screw	4	
10	Ballscrew	1	MBC-222 RH-25 MBC-100 RH-30
11	Ballscrew nut	1	
12	Bracket - spring hood	1	
13	Spring hood	1	MPS-646
14	Bracket - spring hood	1	
15	Bearing	2	BG-24
16	Bearing bracket	1	MBC-106
17	Screw	4	
18	Washer	4	
19	Clamp plate	1	
20	Screw	2	
21	Gib	2	MBT-112
22	Gib	1	MBT-111
23	Clamp plate	1	
24	Chain	2	MP6-27
25	Bolt	2	
26	Sliding block	1	
27	Connecting block	1	
28	Cap	1	
29	Worm	1	
30	Worm wheel	1	MBC-120

Item	Description	Q'ty	Remarks
31	Block	1	
32	Top cover	1	MPH-16
33	Servo motor *	1	See below
34	HDT belt *	1	See below
35	Screw	4	
36	Set screw	1	
37	Pulley	1	PY-135
	Pulley bushing	1	PY-95
38	Bracket	1	
39	C-snap	4	
40	Shaft - chain wheel	4	MBC-67
41	Chain wheel	4	MBC-72
42	C-snap	4	
43	Bearing	4	BG-24
44	Bolt	2	
45	Counter weight	1	
46	Screw	7	
47	Splash guard - right	1	
48	Column	1	
49	Splash guard - left	1	
	Not shown		
50	Way wiper set		MBT-122
51	Oil line		NU-325
52	Home/Limit switch	1	SW-203
	Z axis drive AM-58		


* Motor change			
RH25A	MO-70	DC Servo	
RH25B-E RH30A-E	MO-95	Sigma1	
RH25F RH30F-J 2	MO-126	Sigma2	

** Belt change			
RH25/30A-C	BT-02 or BT-44		Verify belt number
RH25/30D-J 2	BT-02		


MB-25a2

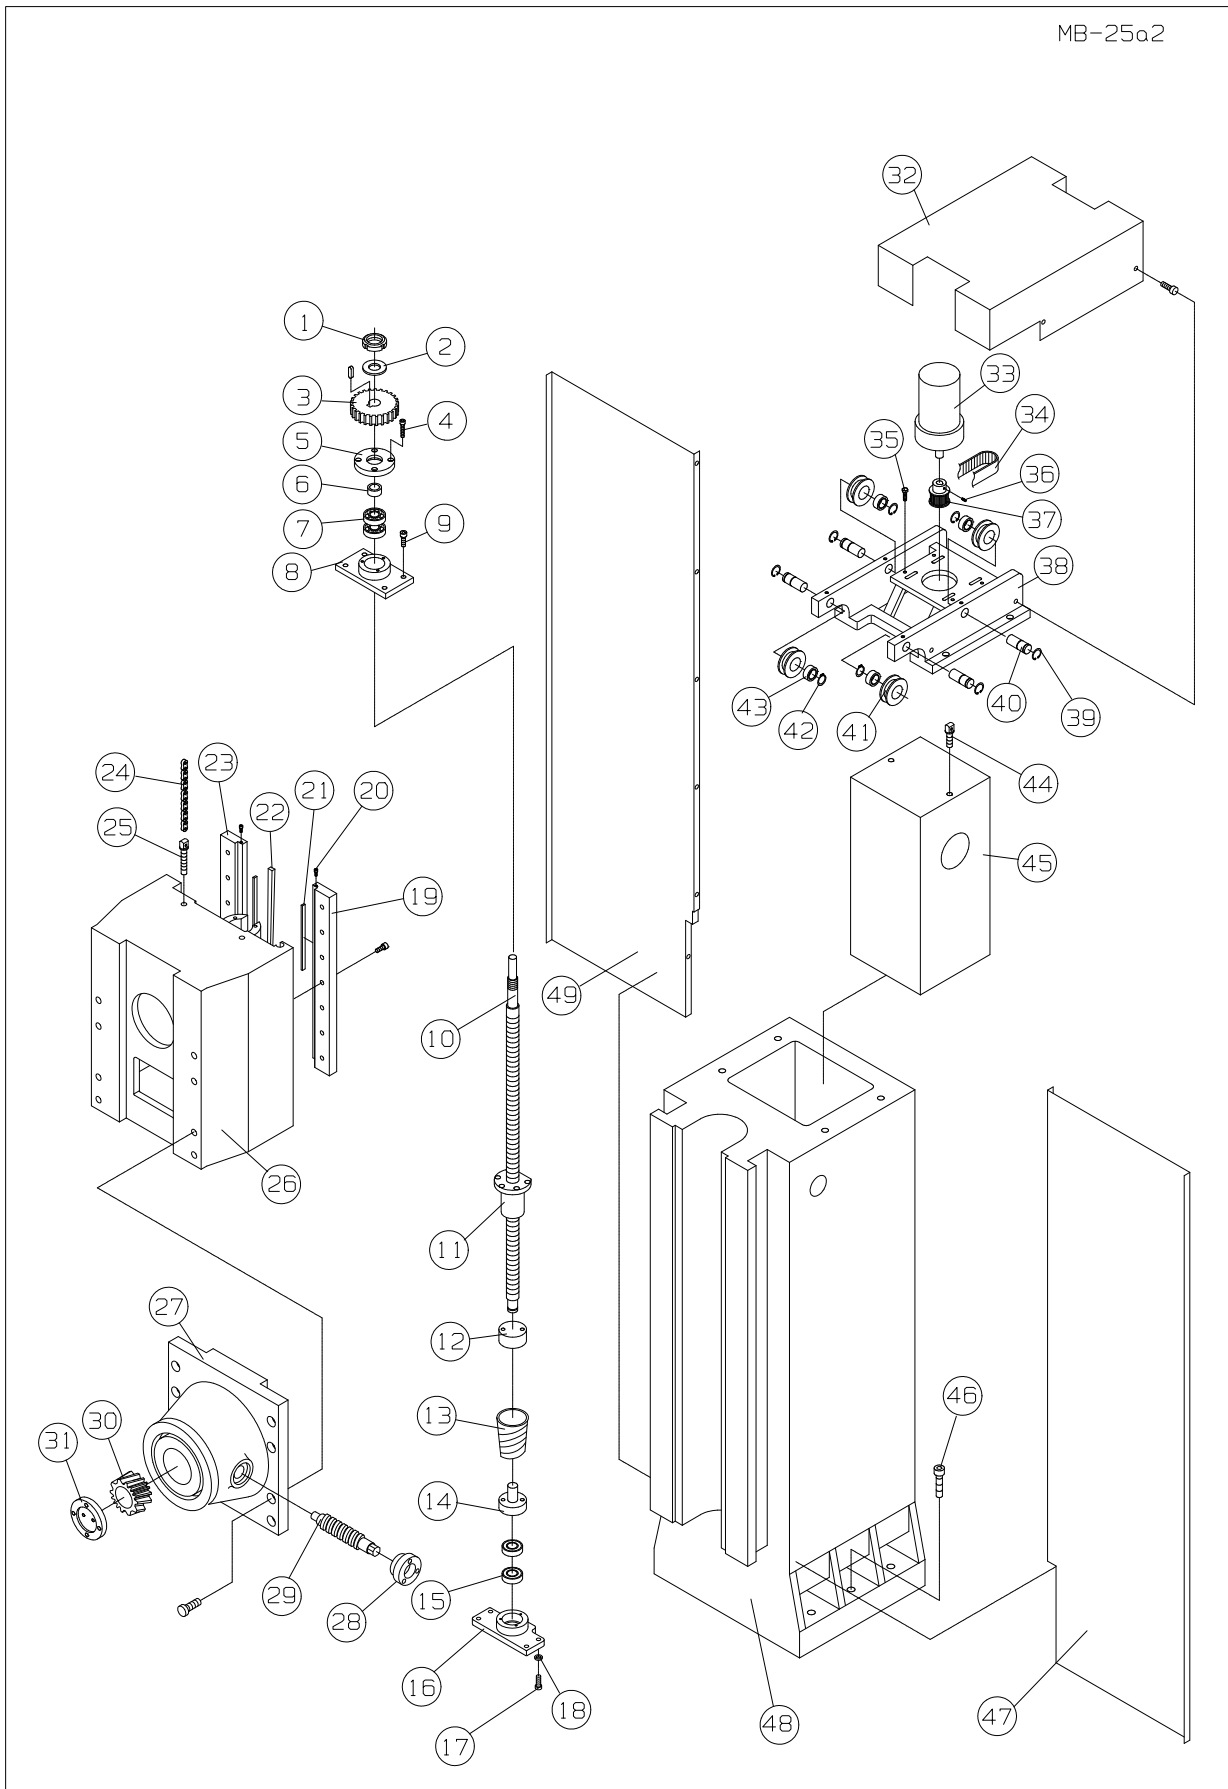

Machine Head Assembly

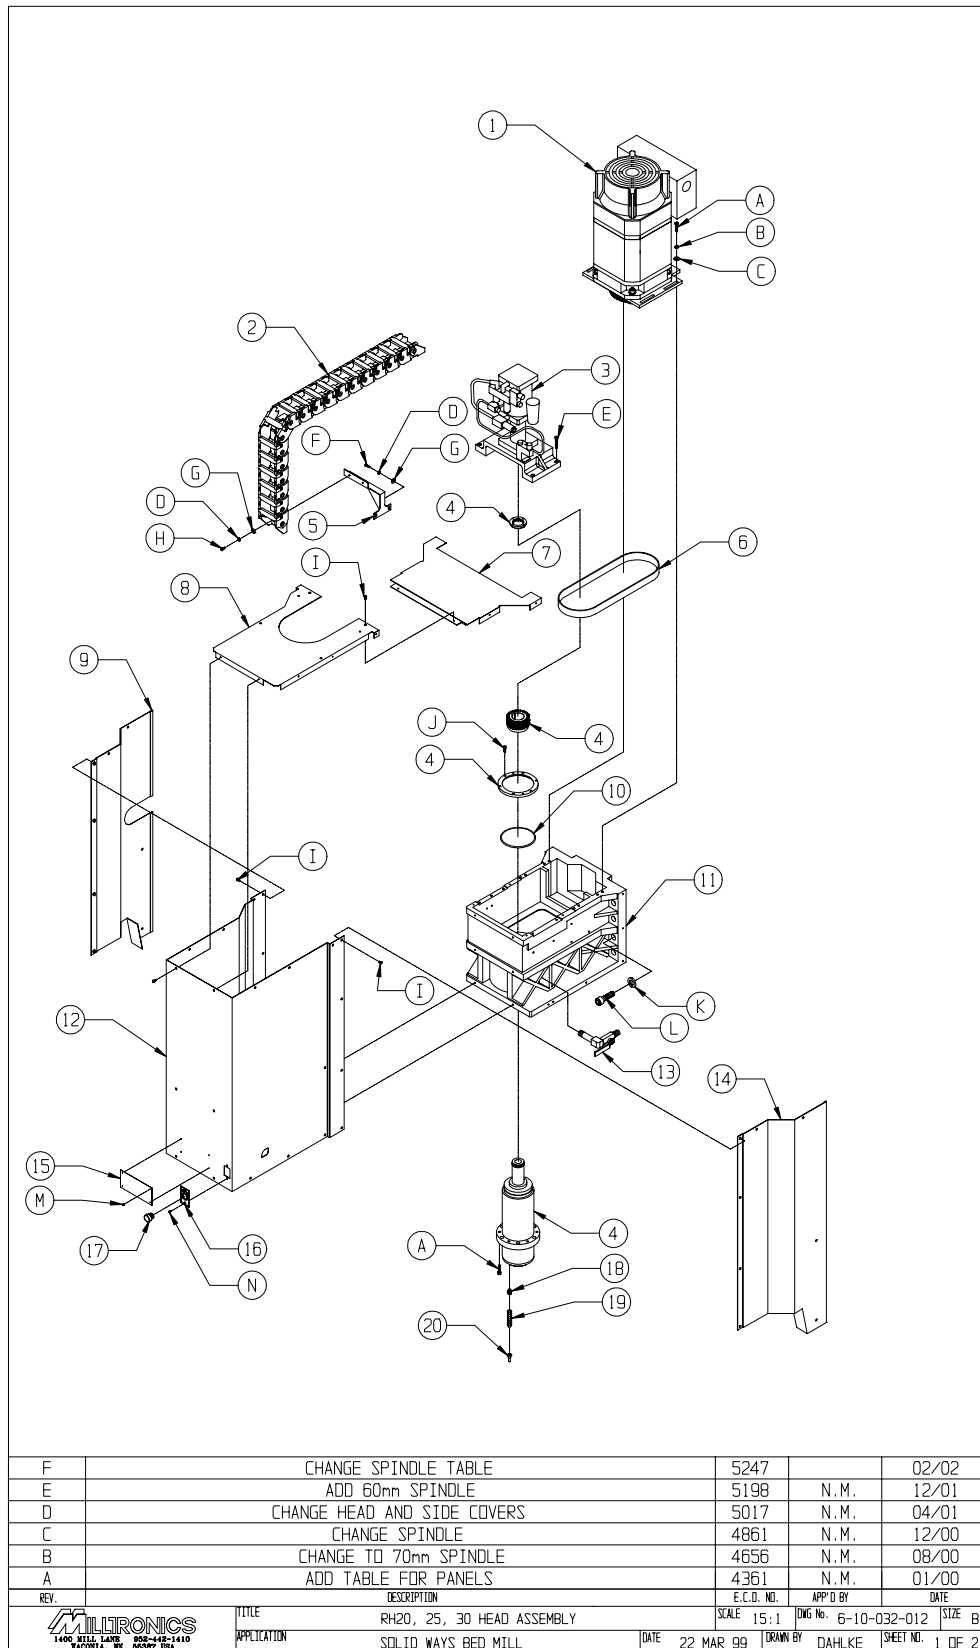

PARTS LIST			
No.	QTY	STOCK No.	DESCRIPTION
1	1	6-10-018-089	SPINDLE MOTOR ASSEMBLY
2	1	MP-534	SPINDLE CABLE TRACK
3	1	6-10-032-020	NU-281 DRAWBAR CYLINDER ASSEMBLY
4	1	SEE TABLE	SETCO SPINDLE ASSEMBLY
5	1	SEE TABLE	CABLE TRACK BRACKET
6	1	BT-62	W-896 SPINDLE BELT
7	1	SEE TABLE	RH HEAD COVER - TOP
8	1	MP-639	UNIVERSAL HEAD COVER TOP
9	1	SEE TABLE	RH HEAD COVER - LEFT
10	1	SEE TABLE	O' RING REAR SEAL
11	1	SEE TABLE	HEAD - MACHINED
12	1	MP-635	UNIVERSAL FRONT HEAD COVER
13	1	6-10-008-039	FLOOD HANDLE SUB-ASSEMBLY
14	1	SEE TABLE	RH HEAD COVER - RIGHT
15	1	LB-01	SAFETY STICKER
16	1	LB-181	TOOL OUT LABEL
17	1	SW-67	TOOL OUT SWITCH
18	6	NU-111	1/4 LOCKLINK 1/8 NPT
19	24	MA-22	LOCKLINK HOSE
20	6	MA-216	1/4 NOZZLE

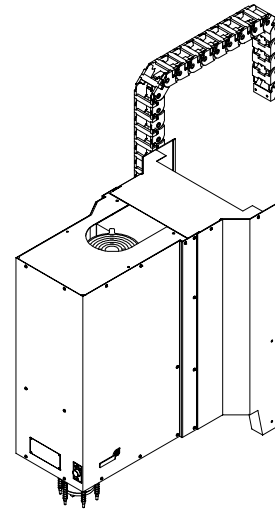

PANELS LIST			
MACHINE	HEADCOVER-TOP	HEADCOVER-LEFT	HEADCOVER-RIGHT
RH20	MPS-275	MPS-276	MPS-277
RH25	MPS-280	MPS-278	MPS-279
RH30	MPS-283	MPS-282	MPS-281

HEADS		
	STOCK No.	DESCRIPTION
RH20	WX-182	O' RING REAR SEAL
RH25		
RH30	WX-270	O' RING REAR SEAL

HARDWARE LIST		
No.	QTY	DESCRIPTION
A	14	M8-1.25 x 30mm SHCS
B	8	8mm LOCK WASHER
C	8	8mm HARDENED FLAT WASHER
D	6	M6 LOCK WASHER
E	4	M8-1.25 x 45mm SHCS
F	2	M6-1 x 20mm BHCS
G	6	M6 FLAT WASHER
H	4	M6-1 x 16mm BHCS
I	39	M6-1 x 10mm BHCS
J	6	M6-1 x 20mm SHCS
K	8	3/4 LOCK WASHER
L	8	3/4-10 x 2 1/2 SHCS
M	4	M3-.5 x 6mm BHCS
N	2	M4-.7 x 8mm BHCS


SPINDLE ASSEMBLY								
RPM	10/15 HP 1 SPEED				15/20 HP OR 22/30 HP 2 SPEED			
	6K	8K	12K	15K	6K	8K	12K	15K
RH20	9897	9897-1	9899-4	9899-5	9900	9900-1	9899-4	9899-5
RH25					9900-2	9900-3	9899-2	9899-3
RH30					9900-2	9900-3	9899-2	9899-3

HEADS		
	STOCK No.	DESCRIPTION
RH20	MX-54	60mm HEAD MACHINED
RH25		
RH30	MX-43	70mm HEAD MACHINED

CABLE TRACK BRACKET		
STOCK No.	DESCRIPTION	
BR-139	RH20 CABLE TRACK BRACKET	
BR-138	RH25/30 CABLE TRACK BRACKET	

F	CHANGE SPINDLE TABLE	5247		02/02
E	ADD 60mm SPINDLE	5198	N.M.	12/01
D	CHANGE HEAD AND SIDE COVERS	5017	N.M.	04/01
C	CHANGE SPINDLE	4861	N.M.	12/00
B	CHANGE TO 70mm SPINDLE	4656	N.M.	08/00
A	ADD TABLE FOR PANELS	4361	N.M.	01/00
REV.	DESCRIPTION	E.C.O. NO.	APP'D BY	DATE
	MILLIRONICS 1400 N. 11th ST. MILWAUKEE, WI 53212	TITLE RH20, 25, 30 HEAD ASSEMBLY	SCALE 15:1	DWG No. 6-10-032-012
	APPLICATION SOLID WAYS BED MILL	DATE 22 MAR 99	DRAWN BY DAHLKE	SHEET NO. 2 OF 2

Spindle Motor and Pulley Assembly

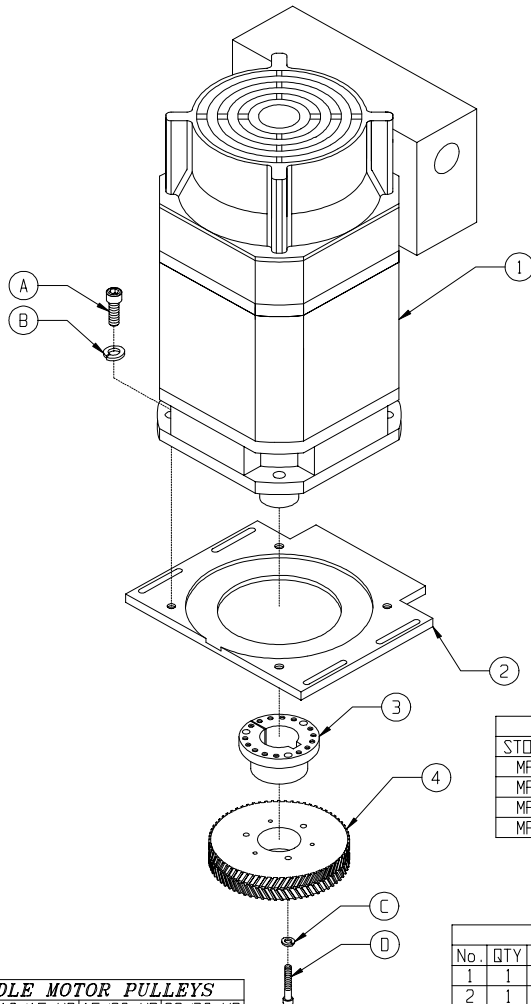

SPINDLE MOTOR PULLEYS				
RPM	10/15 HP	15/20 HP	22/30 HP	
	1 SPEED	2 SPEED	2 SPEED	
6K/8K	PY-201	PY-192	PY-192	
12K/15K	PY-188	PY-188	PY-188	

MOTOR PLATES	
STOCK No.	DESCRIPTION
MP-548	15 H.P. & 22 H.P.
MP-587	10 H.P.
MPB-45	10 H.P. (BRIDGE MILL ONLY)
MPB-40	15 H.P. (BRIDGE MILL ONLY)

PARTS LIST			
No.	QTY	STOCK No.	DESCRIPTION
1	1	SEE TABLE	YASKAWA SPINDLE MOTORS
2	1	SEE TABLE	MOTOR PLATES
3	1	SEE TABLE	BUSHINGS
4	1	SEE TABLE	SPINDLE MOTOR PULLEYS

BUSHINGS	
STOCK No.	DESCRIPTION
PY-97	48mm ID SK BUSHING (USED WITH MO-131, MO-132 SPINDLE MOTOR)
PY-184	32mm ID SK BUSHING (USED WITH MO-114 SPINDLE MOTOR)


YASKAWA SPINDLE MOTORS			
STOCK No.	DESCRIPTION		
MO-132	22 H.P. SPINDLE MOTOR - YASKAWA		
MO-131	15 H.P. SPINDLE MOTOR - YASKAWA		
MO-114	10 H.P. SPINDLE MOTOR - YASKAWA		


HARDWARE LIST		
No.	QTY	DESCRIPTION
A	4	1/2-13 x 1 1/4 SHCS
B	4	1/2 LOCK WASHER
C	3	5/16 LOCK WASHER
D	3	5/16-18 x 2 SHCS

D	CHANGE 15 HP SPINDLE MOTOR	5257		02/02						
C	CHANGE MOTOR/PULLEY CHARTS	5251	N.M.	02/02						
B	CHANGE 6K & 8K MOTOR PULLEY	5197	N.M.	12/01						
A	ADD MOTOR PLATE TO CHART	5058	N.M.	04/01						
REV.	DESCRIPTION	E.C.O. NO.	APP'D BY	DATE						
MATERIAL/FINISH										
MILLIRONICS 1400 MILL LANE 952-442-1410 WACONIA, MN 55387 USA										
					STOCK/ASSY No.					
					TOLERANCE UNLESS SPECIFIED					
					X.XXX ± X.XX ± X.X ± ANGLE ±					
TITLE					GOODYEAR MOTOR AND PULLEY ASSEMBLY					
APPLICATION					GENERAL PRODUCTS					
SCALE					5:1		DWG No. 6-10-018-089		SIZE B	
DATE					04 AUG 00		DRAWN BY		DAHLKE	
							SHEET NO.		1 OF 1	

This page intentionally left blank

Power Drawbar Cylinder Assembly

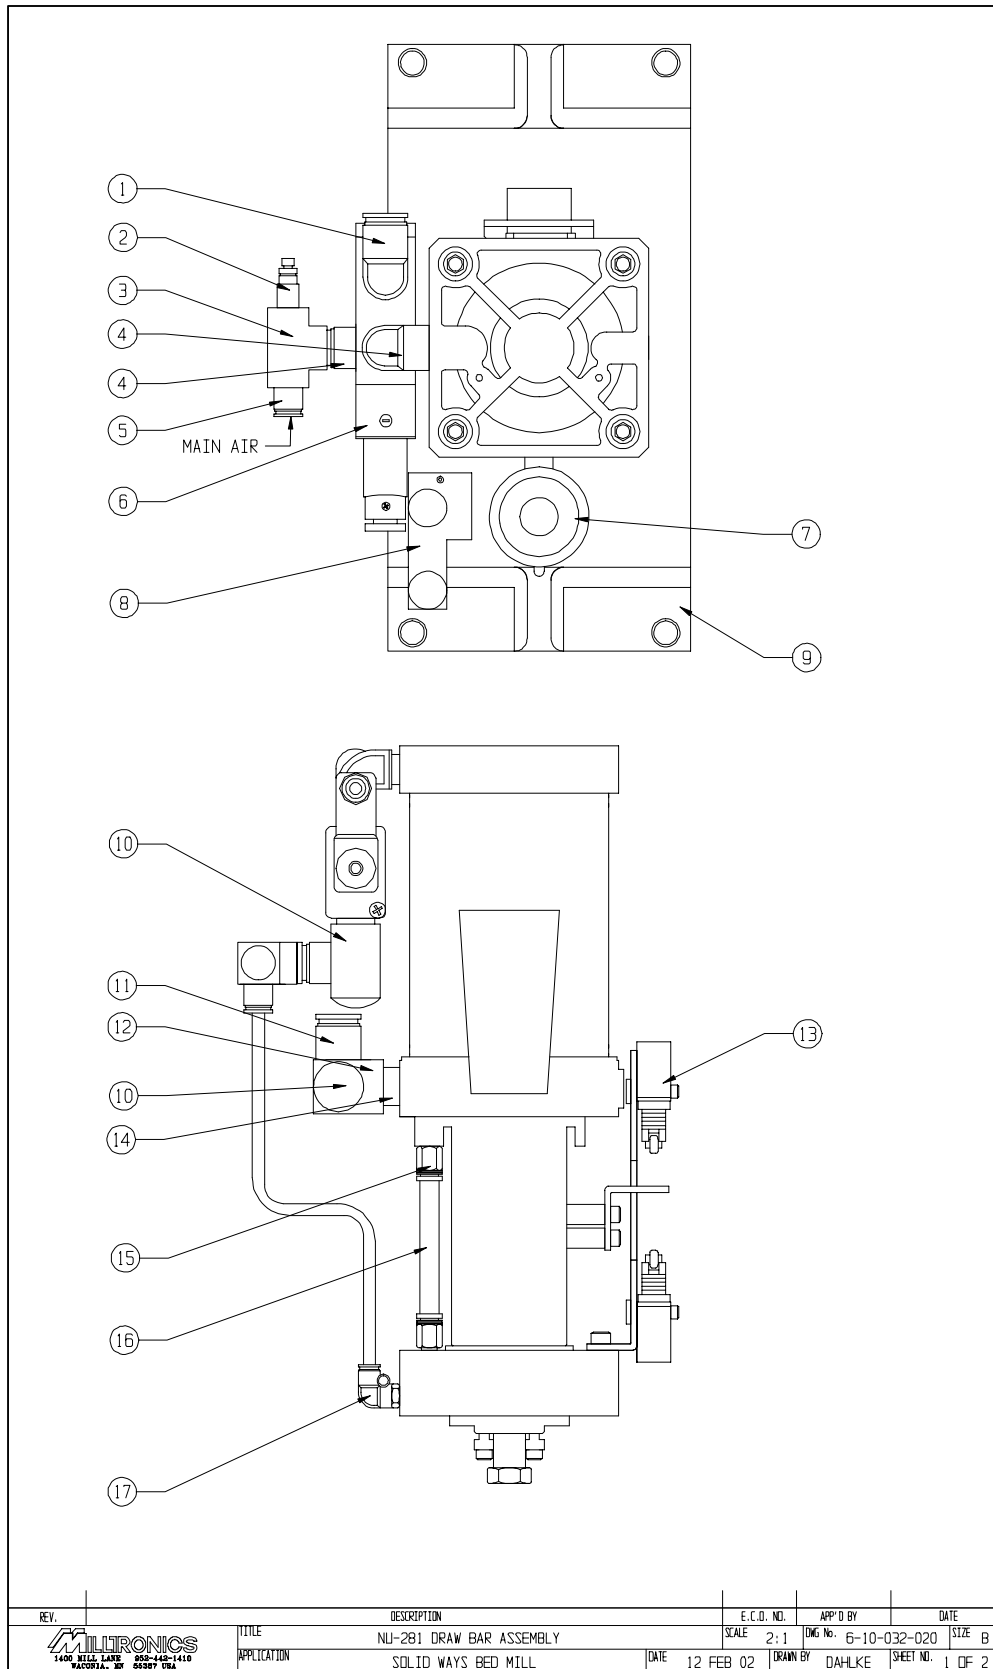

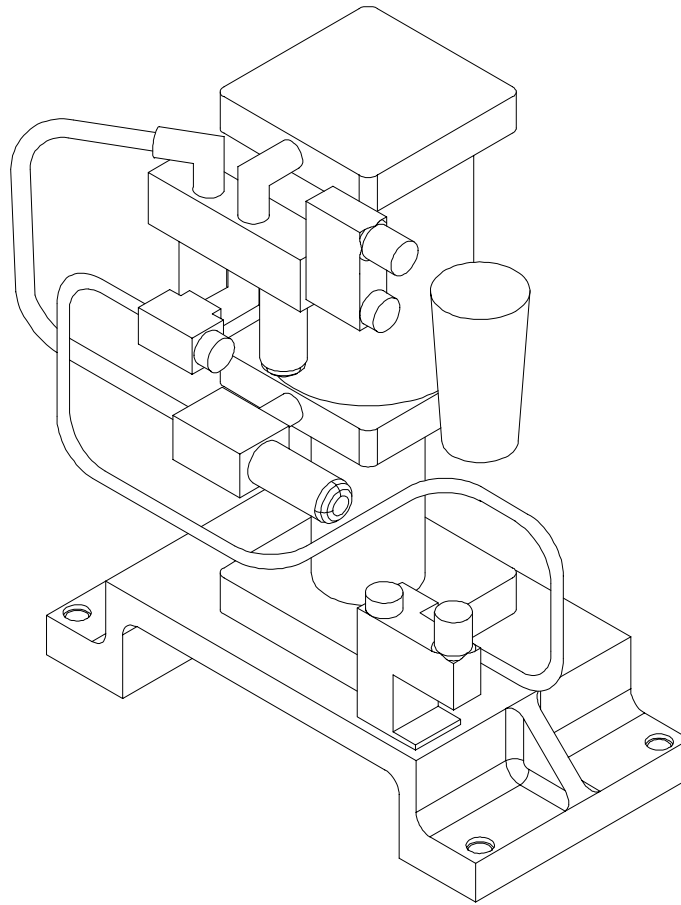


PARTS LIST

No.	QTY	PART No.	DESCRIPTION
1	1	NU-289	3/8NPT 90° SWIVEL 10mm TUBE
2	1	NU-290	3/8NPT 6mm TUBE - FLOW CONTROL
3	1	NU-291	3/8NPT FEMALE TEE
4	2	NU-292	3/8NPT MALE ELBOW
5	1	NU-70	3/8NPT MALE STRAIGHT 3/8 TUBE
6	1	NU-293	DRAWBAR SOLENOID
7	1	NU-294	OIL CUP
8	1	NU-295	AIR PURGE SOLENOID
9	1	-	BASE CASTING
10	3	NU-296	NOISE SUPPRESSOR (MUFFLER)
11	1	NU-297	3/8NPT MALE STRAIGHT 10mm TUBE
12	1	NU-298	CHECK VALVE
13	2	SW-52	LIMIT SWITCH
14	1	NU-299	3/8NPT BRASS NIPPLE
15	1	NU-300	1/8NPT MALE STRAIGHT 8mm TUBE
16	1	NU-301	8mm TUBING
17	1	NU-302	1/8NPT 90° SWIVEL 6mm TUBE


REV.	DESCRIPTION	E.C.D. NO.	APP'D BY	DATE
	NU-281 DRAW BAR ASSEMBLY	SCALE 2:1	ONG No. 6-10-032-020	SIZE B
	APPLICATION SOLID WAYS BED MILL	DATE 12 FEB 02	DRAWN BY DAHLKE	SHEET NO. 2 OF 2

Pneumatic Schematic

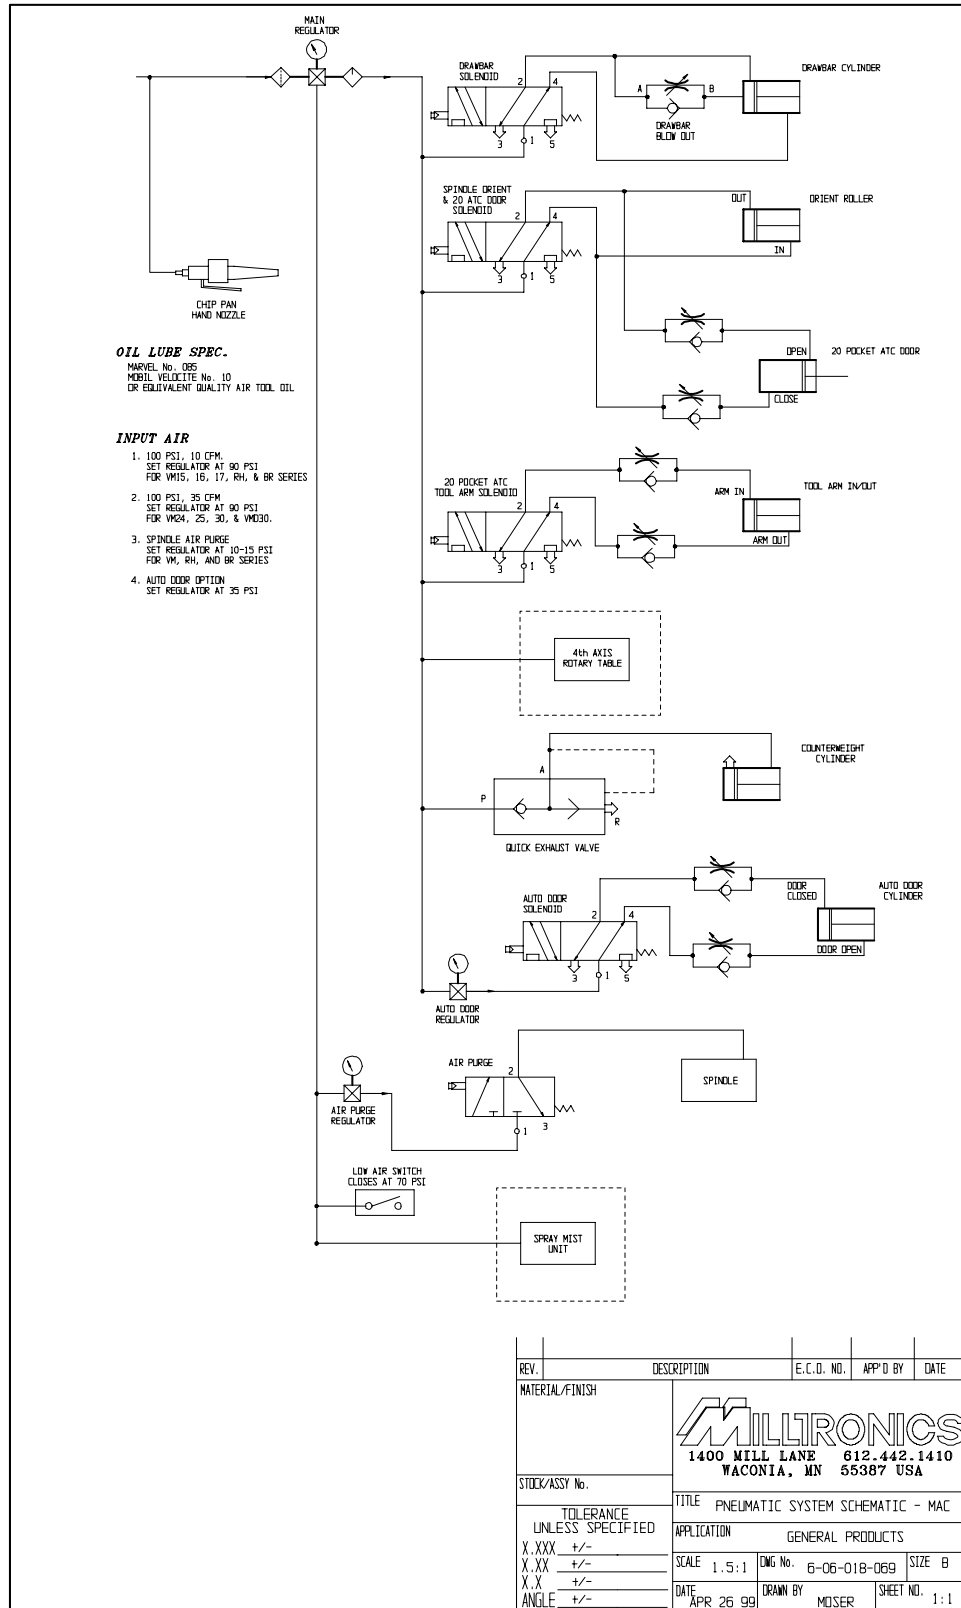


Air Filter / Regulator / Lubricator Assembly

PARTS LIST			
ITEM	QTY	STOCK No.	DESCRIPTION
1	1	NU-186	1/4 NPT 1/4 TUBE SWIVEL ELBOW
2	1	NU-262	LOW PRESSURE REGULATOR W/GAGE
3	1	NU-212	LARGE FILTER/HIGH PRESSURE REGULATOR
4	1	NU-30	1/4 NPT PIPE NIPPLE
5	2	NU-210	LARGE MOUNTING SPACER
6	1	NU-211	LARGE MANIFOLD SPACER
7	1	NU-199	1/4 NPT 3/8 TUBE SWIVEL ELBOW
8	1	NU-259	DIGITAL AIR GAUGE WITH PRESSURE SWITCH
9	1	NU-219	1/4 NPT BRANCH TEE
10	1	NU-32	1/4 NPT 1/4 TUBE MALE STRAIGHT
11	1	NU-209	LARGE LUBRICATOR

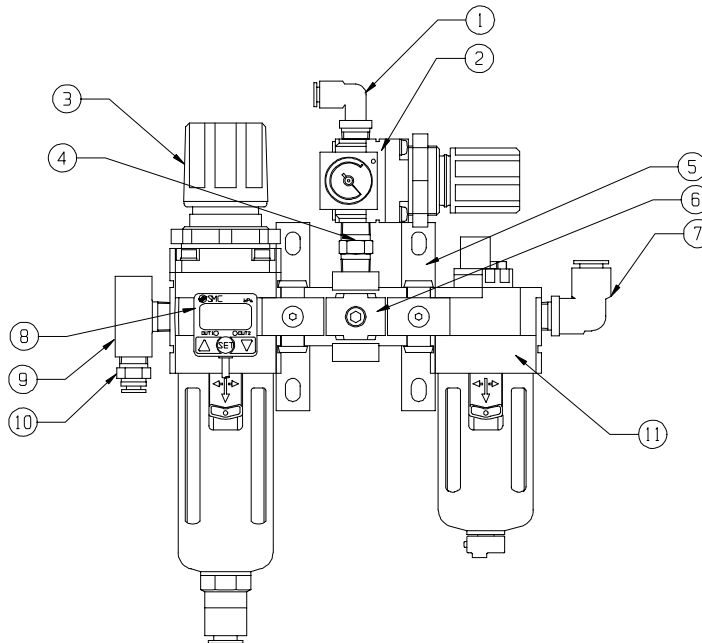


B	ADD DIGITAL GAGE	4860		12/00
A	CHANGE STOCK NUMBER	4813	N.M.	12/00
REV.	DESCRIPTION	E.C.O. NO.	APP'D BY	DATE
MATERIAL/FINISH		 1400 MILL LANE 952-442-1410 WACONIA, MN 55387 USA		
STOCK/ASSY No.				
TOLERANCE UNLESS SPECIFIED		TITLE NU-232 FRL ASSEMBLY		
X .XXX +/-		APPLICATION GENERAL PRODUCTS		
X .XX +/-		SCALE 3:1		DWG NO. 6-10-018-085
X .X +/-		DATE 14 JAN 00		SIZE B
ANGLE +/-		DRAWN BY DAHLKE		SHEET NO. 1

20 Pocket Rotary Tool Changer Assembly

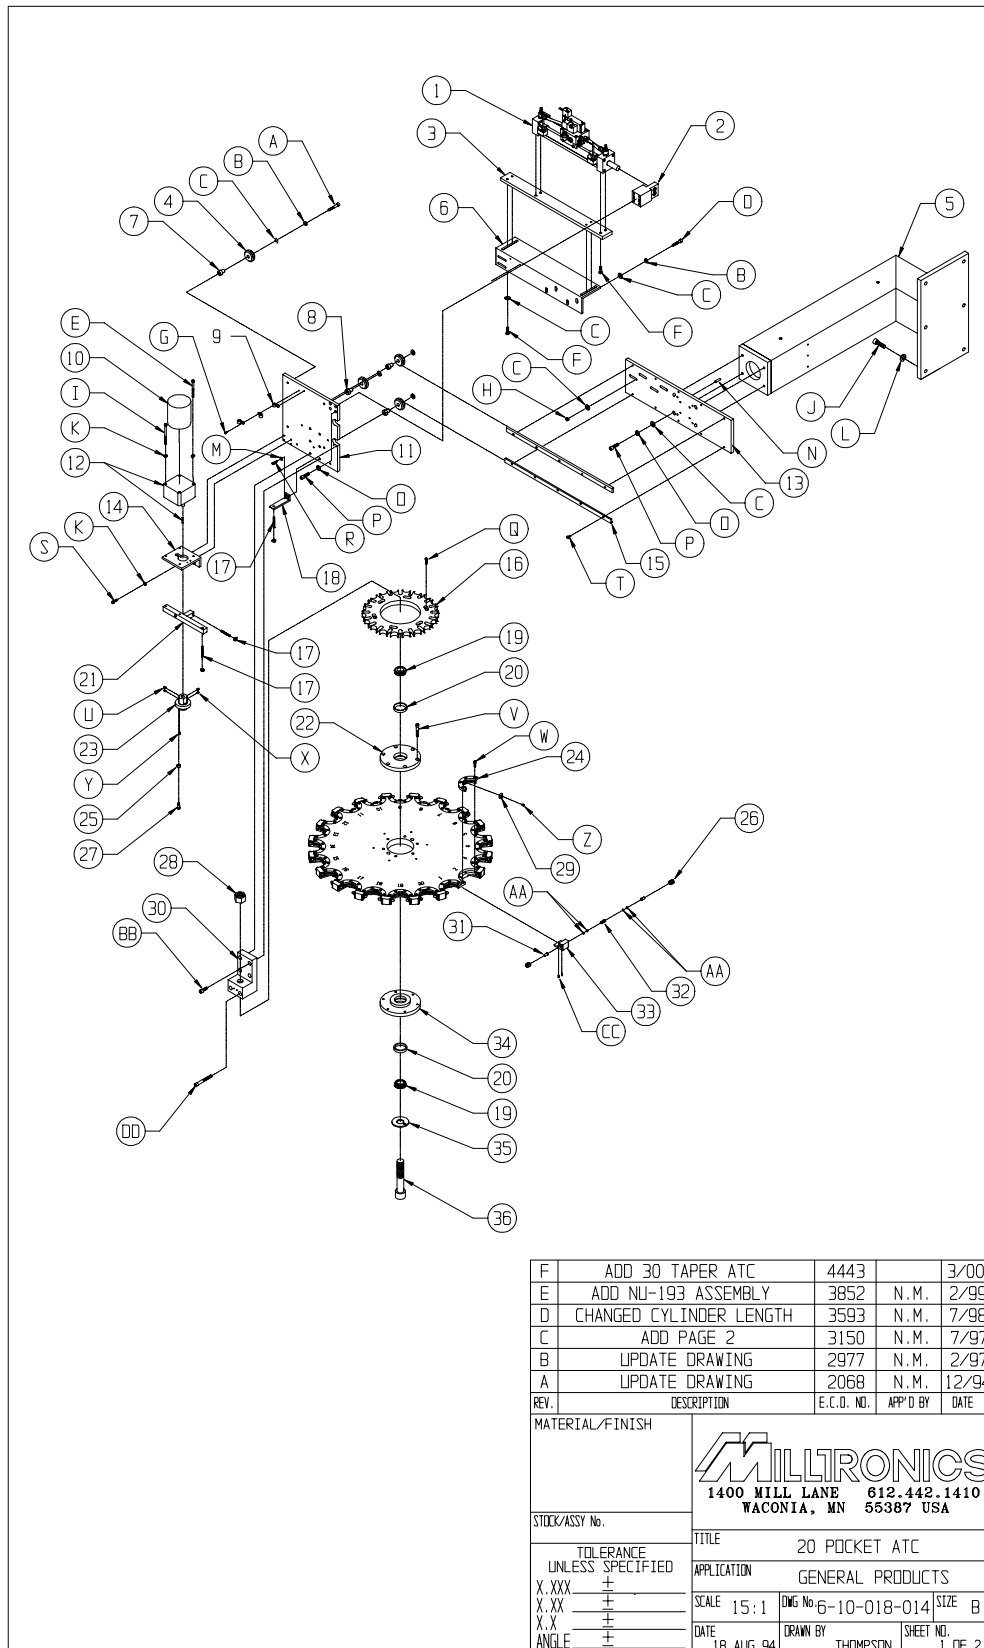

F	ADD 30 TAPER ATC	4443		3/00
E	ADD NU-193 ASSEMBLY	3852	N.M.	2/99
D	CHANGED CYLINDER LENGTH	3593	N.M.	7/98
C	ADD PAGE 2	3150	N.M.	7/97
B	UPDATE DRAWING	2977	N.M.	2/97
A	UPDATE DRAWING	2068	N.M.	12/94
REV.	DESCRIPTION	E.C.D. NO.	APP'D BY	DATE
MATERIAL/FINISH				
 1400 MILL LANE 612.442.1410 WACONIA, MN 55387 USA				
STOCK/ASSY No.		TITLE		
TOLERANCE UNLESS SPECIFIED		20 POCKET ATC		
X .XXX		APPLICATION		
X .XX		GENERAL PRODUCTS		
X .X		SCALE 15:1		
ANGLE		DWG No 6-10-018-014 SIZE B		
		DATE 18 AUG 94		
		DRAWN BY THOMPSON		
		SHEET NO. 1 OF 2		

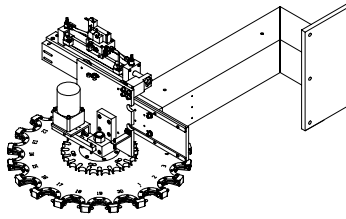

PARTS LIST			
No.	QTY	STOCK No.	DESCRIPTION
1	1	6-10-018-063	NU-193 9" AIR CYLINDER ASSEMBLY
2	1	MP-427	9 IN. AIR CYLINDER CLEVIS
3	1	MP-426	9 IN. AIR CYLINDER PLATE
4	4	MP-143	V-RAIL GUIDE WHEEL
5	1	SEE TABLE	20 POCKET ARM
6	1	MP-117	20 POCKET AIR CYLINDER MOUNTING BRACKET
7	2	MP-145	STATIONARY BUSHING
8	2	MP-144	ADJUSTABLE BUSHING
9	3	WX-82	3/8 IN. CABLE CLAMP
10	1	MD-72	GENEVA MOTOR
11	1	MP-123	20 POCKET CAROUSEL SLIDING PLATE
12	1	MD-71	GEAR BOX W/KEY
13	1	MP-142	V-RAIL PLATE
14	1	MP1-117	GENEVA WHEEL MOTOR MOUNT
15	2	MX-12	20 POCKET LINEAR V-RAIL MODS.
16	1	MP-120	20 POSITION GENEVA WHEEL
17	3	PR-19	SWITCH PROX
18	1	BR-130	TOOL CHANGER PROX. SWITCH BRACKET
19	2	BG-33	CONE TAPERED BEARING
20	2	BG-34	CUP TAPERED BEARING
21	1	MP-466	HOME/GENEVA PROX BRACKET
22	1	MP-116	UPPER CAROUSEL BEARING CUP
23	1	MX-10	20 PKT ATC DRIVE CAM - MACHINED
24	20	SEE TABLE	20 POCKET INSERT
25	1	HD-39	1/2 x 5/16 DRILL BUSHING
26	40	MP1-140	([^]) PUSH PIN GUIDE
27	1	HD-38	5/16 x 3/8 SHOULDER BOLT
28	1	HD-07	1-8 UNC NYLOCK NUT
29	20	SEE TABLE	([^]) 20 POCKET TOOL CHANGE KEY
30	1	MP-124	20 POCKET CAROUSEL MOUNTING BRACKET
31	40	MP1-144	([^]) PUSH PIN
32	20	MP1-141	([^]) COIL SPRING
33	20	MP-121	20 ATC LOCKING PIN BLOCK
34	1	MP-115	LOWER CAROUSEL BEARING CUP
35	1	HD-10	1 IN. HARDENED SERIES 'N' WASHER
36	1	HD-09	1-8 x 5 1/2 UNC SHCS BOLT

HARDWARE LIST			
No.	QTY	DESCRIPTION	
A	4	5/16-18 x 1 5/8 SHCS	
B	8	5/16 LOCK WASHER	
C	20	5/16 HARDENED FLAT WASHER	
D	4	5/16-18 x 1 1/2 SHCS	
E	2	1/4-20 x 3 SHCS	
F	8	5/16-24 x 3/4 BHCS	
G	2	8-32 x 1/2 BHCS	
H	4	5/16-18 HEX NUT	
I	2	1/4-20 x 3 1/2 SHCS	
J	6	1/2-13 x 2 SHCS	
K	8	1/4 LOCK WASHER	
L	6	1/2 LOCK WASHER	
M	2	#10 FLAT WASHER	
N	4	1/4 x 1 DOWEL PIN	
O	8	3/8 LOCK WASHER	
P	8	3/8-16 x 1 1/4 SHCS	
Q	6	1/4-20 x 3/4 BHCS	
R	2	10-32 x 3/4 BHCS	
S	4	1/4-20 x 7/8 SHCS	
T	10	1/4-20 x 5/8 BHCS	
U	2	5/16-18 x 1/4 SHSS	
V	6	5/16-18 x 1 3/4 SHCS	
W	80	1/4-20 x 3/4 SHCS	
X	2	1/4-20 x 1/4 SHSS	
Y	1	8-32 x 1/4 BHCS	
Z	20	([^]) 8-32 x 1/4 SHCS	
AA	80	([^]) (*) No. 6 FLAT WASHER	
BB	4	3/8-16 x 1 SHCS	
CC	40	10-32 x 3/16 BRASS TIPPED SHSS	
DD	2	3/8-16 x 3 SHCS	

20 POCKET ARM CHART

MACHINE	STOCK No.
VM15/16D	MP1-193
VM16E/VM-17	MP1-327
VM-24	MP6-126
VM-30	MP7-61
VMD-30	MP7-61
RH-20	MPS-05
RH25	MPS-200
RH30	MPS-207

(*) IS USED FOR BT FLANGE OPTION ONLY

([^]) IS REMOVED FOR 30 TAPER ATC SEE NOTE 1

20 POCKET TOOL CHANGE KEY CHART

V-FLANGE	MP1-45
BT	MP1-121

20 POCKET INSERT CHART

V-FLANGE	MX-11
BT	MX-13
30 TAPER	MX-41

NOTES:

- ON 30 TAPER OPTION, 40 QTY. HD-76 SPRING PLUNGERS REPLACE MP1-140, MP1-141, MP1-144, AND TOOL CHANGE KEYS.



F	ADD 30 TAPER ATC	4443		3/00
E	ADD NU-193 ASSEMBLY	3852	N.M.	2/99
D	CHANGED CYLINDER LENGTH	3593	N.M.	7/98
C	ADD PAGE 2	3150	N.M.	7/97
B	UPDATE DRAWING	2977	N.M.	2/97
A	UPDATE DRAWING	2068	N.M.	12/94
REV.	DESCRIPTION	E.C.O. NO.	APP'D BY	DATE
MATERIAL/FINISH				
STOCK/ASSY No.				
TOLERANCE UNLESS SPECIFIED				
X.XXX ±				
X.XX ±				
X.X ±				
ANGLE ±				
TITLE 20 POCKET ATC				
APPLICATION GENERAL PRODUCTS				
SCALE 15:1 DWG No. 6-10-018-014 SIZE B				
DATE 18 AUG 94 DRAWN BY THOMPSON SHEET NO. 2 OF 2				



20 Pocket Air Cylinder Assembly

PARTS LIST			
ITEM	QTY	STOCK No.	DESCRIPTION
1	1	NU-185	AIR VALVE - DOOR - OPEN/CLOSE
2	1	NU-183	AIR VALVE - CAROUSEL - IN/OUT
3	2	NU-180	FLOW CONTROL
4	2	NU-95	MALE STRAIGHT CONNECTOR 1/4 NPT - 3/8 TUBE
5	1	NU-194	MANIFOLD
6	2	NU-78	3/8 NYLON TUBING
7	1	NU-199	SWIVEL ELBOW 1/4 NPT - 3/8 TUBE
8	2	NU-79	MUFFLER
9	1	NU-167	9" AIR CYLINDER
10	2	NU-195	MANIFOLD BRACKET
11	2	NU-187	SWIVEL ELBOW 1/8 NPT - 1/4 TUBE
12	2	SW-158	REED SWITCH

HARDWARE LIST		
ITEM	QTY	DESCRIPTION
A	2	M3-.5 x 25mm SHCS
B	2	M3-.5 x 30mm SHCS
C	4	8-32 x 1 1/4 SHCS
D	4	10-32 x 1/4 SHCS

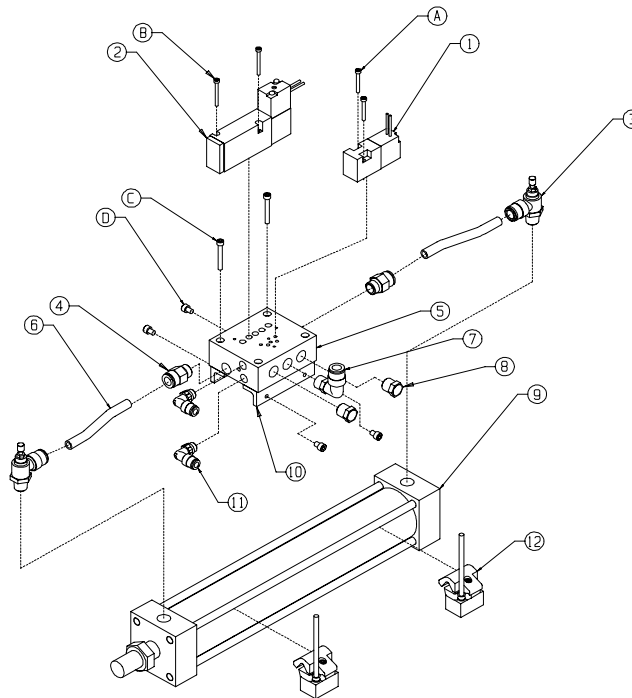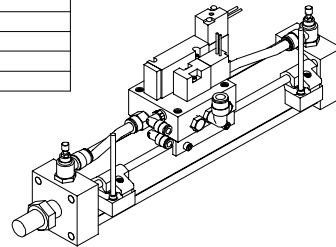


REV.	DESCRIPTION	E.C.D. NO.	APP'D BY	DATE
MATERIAL/FINISH		 1400 MILL LANE 612.442.1410 WACONIA, MN 55387 USA		
STOCK/ASSY No.				
TOLERANCE UNLESS SPECIFIED		TITLE NU-193 - 9" AIR CYLINDER ASSEMBLY		
X .XXX +/-		APPLICATION GENERAL PRODUCTS		
X .XX +/-		SCALE 4:1	DWG No. 6-10-018-063	SIZE B
X .X +/-		DATE 19 FEB 99	DRAWN BY DAHLKE	SHEET NO. 1:1
ANGLE +/-				

20 Pocket ATC Top Cover Assembly

HARDWARE LIST		
No.	QTY	DESCRIPTION
A	10	8-32 x 3/8 BHCS
B	2	1/4-20 NYLOCK HEX NUT
C	7	1/4 FLAT WASHER
D	3	1/4 LOCK WASHER
E	2	1/4-20 x 1 SHCS
F	3	1/4-20 x 3/4 SHCS
G	1	5/16-24 JAM NUT
H	2	10-32 x 3/8 BHCS
I	1	5/16 LOCK WASHER
J	2	#10 LOCK WASHER
K	2	5/16 FLAT WASHER
L	2	6-32 x 1/8 RHMS NYLON
M	12	8-32 x 3/8 FHCS

PARTS LIST			
No.	Qty.	PART No.	DESCRIPTION
1	1	MM-60	TOP COVER ACCESS PANEL
2	1	MM-61	TOP COVER ASSEMBLY
3	2	NU-201	FLOW CONTROL
4	1	NU-129	AIR CYLINDER 1"x2"
5	1	NU-04	CYLINDER BASE AND PIN
6	1	NU-03	CYLINDER CLEVIS AND PIN
7	1	HD-38	5/16 x 3/8 SHOULDER BOLT
8	1	MM-64	CAROUSEL DOOR
9	1	MM-63	CAROUSEL COVER REAR
10	1	MM-62	CAROUSEL COVER FRONT

THIS ASSEMBLY IS USED ON VM24, VM25,
VM30, VMD30, RH20, RH25, RH30

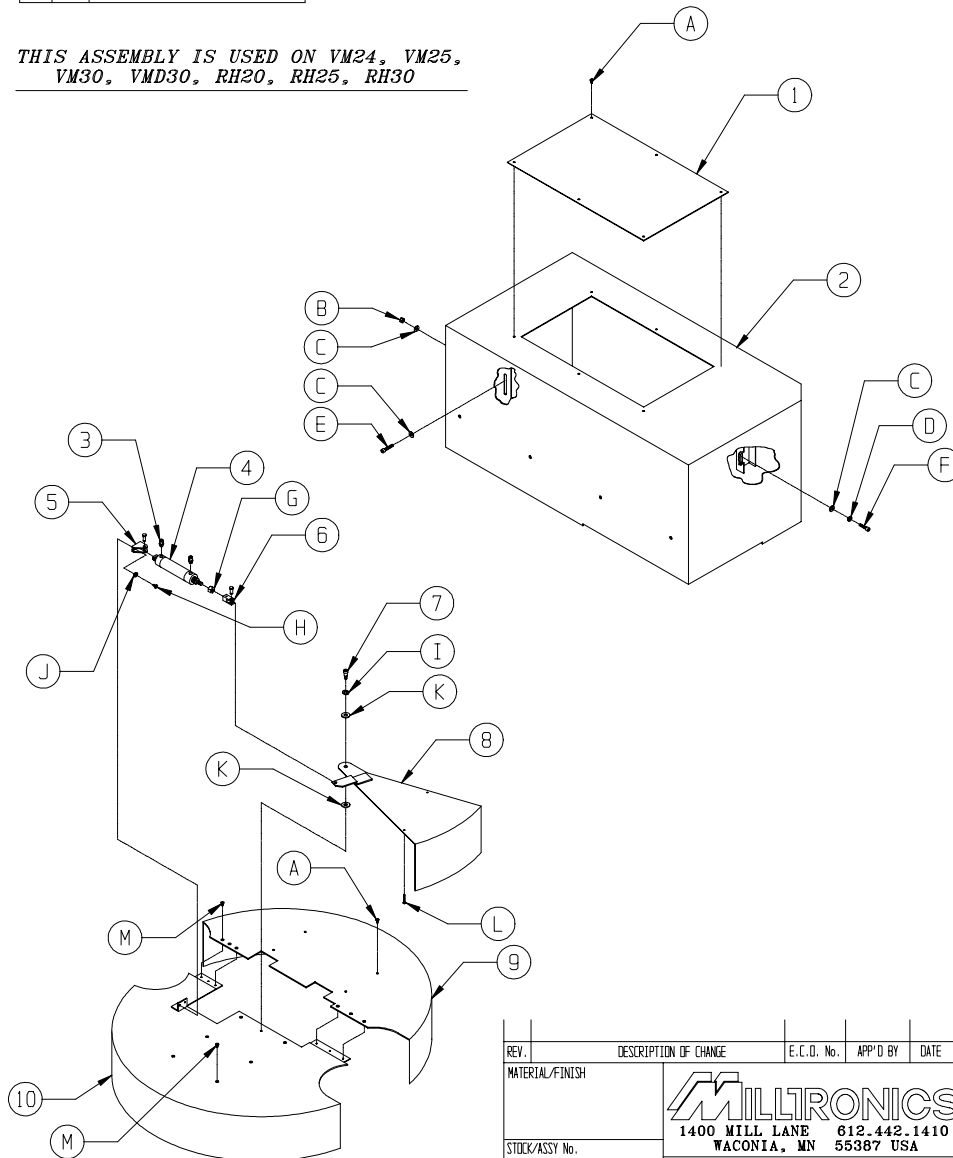

REV.	DESCRIPTION OF CHANGE	E.C.O. No.	APP'D BY	DATE
MATERIAL/FINISH				
STOCK/ASSY No.				
TOLERANCE UNLESS SPECIFIED				
X.XXX	+/-			
X.XX	+/-			
X.X	+/-			
ANGLE	+/-			

1400 MILL LANE 612.442.1410
WACONIA, MN 55387 USA


TITLE 20 POCKET ATC TOP COVER ASSEMBLY - VM24, VM25, VM30, VM300

APPLICATION GENERAL PRODUCTS

SCALE 10:1 DWG No. 6-10-018-083 SIZE B

DATE 21 DEC 99 DRAWN BY DAHLKE SHEET No. 1 OF 1

Pick and Place Tool Changer Assembly

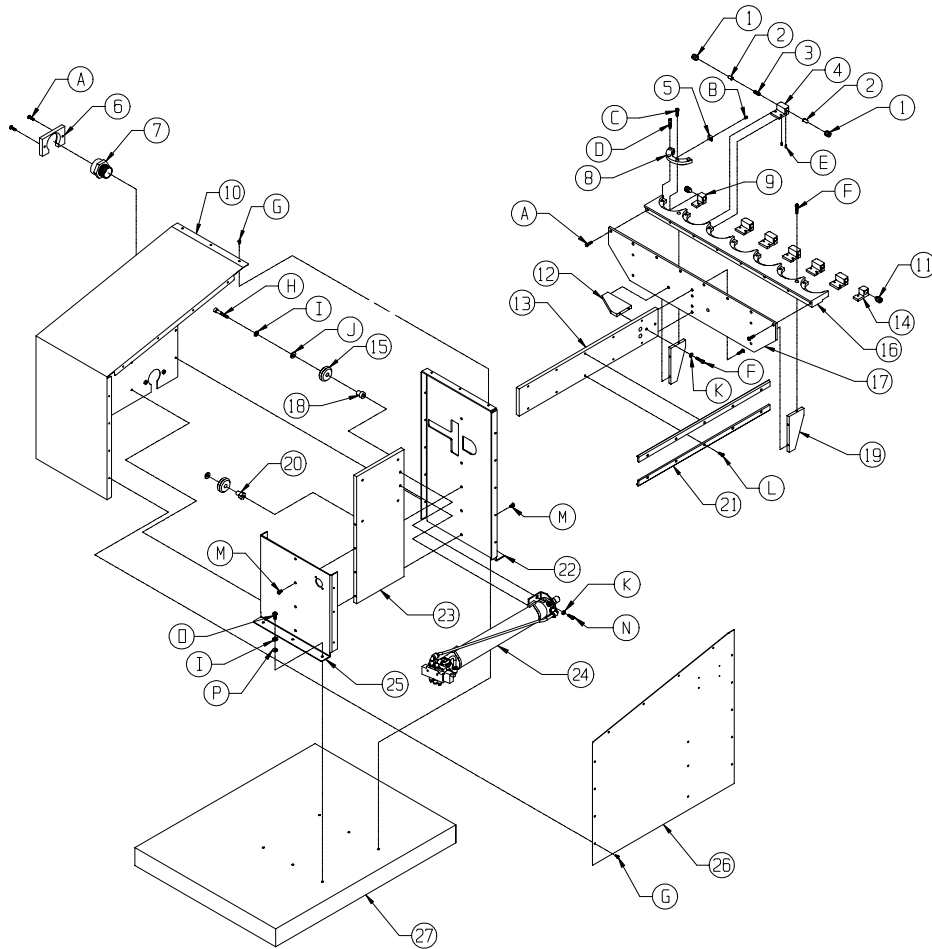


C	CHANGE STOCK NUMBER	4855		12/00
B	ADD BT PIN BLOCKS	4568	N.M.	5/00
A	CHANGE TOOL TRAY CHART	4311	N.M.	12/99
REV.	DESCRIPTION OF CHANGE	E.C.O. No.	APP'D BY	DATE
MATERIAL/FINISH		 1400 MILL LANE 952-442-1410 WACONIA, MN 55387 USA		
STOCK/ASSY No.				
TOLERANCE UNLESS SPECIFIED		TITLE P+P ATC ASSEMBLY		
X.XXX	+/- .005	APPLICATION SOLID WAYS BED MILL		
X.XX	+/- .010	SCALE 12:1 DWG No. 6-10-032-014 SIZE B		
X.X	+/- .030	DATE 18 OCT 99 DRAWN BY DAHLKE SHEET No. 1 OF 2		
ANGLE	+/- 1.0°			

POCKET TOOL CHANGER CHART

	POCKET INSERT	KEY	SPRING	CENTER	LEFT	RIGHT
ITEM No.	(8)	(5)	(3)	(4)	(9)	(14)
V-FLANGE	MX-11	MP1-45	MPS-208	MPS-197	MPS-182	MPS-183
BT	MX-13	MP1-121	MP1-141	MPS-238	MPS-236	MPS-237

TOOL AND BACK PLATE CHART

	BACK PLATE	TOOL PLATE
5 POCKET	MPS-203	MPS-202
6 POCKET	MPS-188	MPS-189
7 POCKET	MPS-205	MPS-204

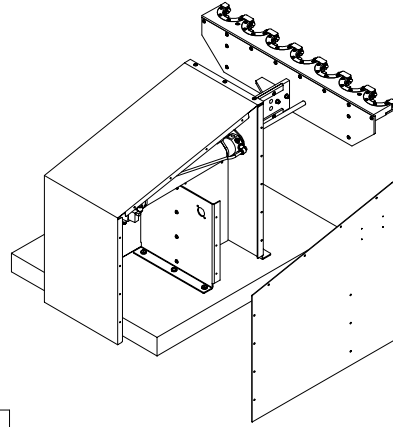

PARTS LIST

No.	QTY	STOCK No.	DESCRIPTION
1	12	MP1-140	PUSH PIN GUIDE
2	12	MP1-144	PUSH PIN
3	6	SEE TABLE	SPRING
4	6	SEE TABLE	LOCKING PIN BLOCK - CENTER
5	7	SEE TABLE	ATC POCKET TOOL KEY
6	2	BR-111	CONDUIT BRACKET
7	2	WX-246	FITTING - END
8	7	SEE TABLE	ATC POCKET INSERT
9	1	SEE TABLE	P+P LOCKING PIN BLOCK - LEFT
10	1	MPS-195	P+P COVER - REAR
11	2	HD-81	END SPRING PLUNGER
12	1	MPS-186	P+P ATC - CENTER BRACKET
13	1	MPS-180	P+P ATC SLIDING PLATE
14	1	SEE TABLE	P+P LOCKING PIN BLOCK - RIGHT
15	4	MP-143	V-RAIL GUIDE WHEEL
16	1	SEE TABLE	P+P ATC - TOOL PLATE
17	1	SEE TABLE	P+P ATC - BACK PLATE
18	2	MP-144	ADJUSTABLE BUSHING
19	2	MPS-187	P+P ATC - SIDE BRACKET
20	2	MP-145	STATIONARY BUSHING
21	2	MX-12	LINEAR V-RAILS
22	1	MPS-185	P+P ATC MAIN UPRIGHT - FRONT
23	1	MPS-184	P+P GUIDE WHEEL PLATE
24	1	6-10-018-082	NU-205 15" AIR CYLINDER ASSEMBLY
25	1	MPS-181	P+P ATC MAIN UPRIGHT - REAR
26	1	MPS-196	P+P COVER PLATE - FRONT
27	1	SEE TABLE	P+P TOOL TRAY

TOOL TRAYS


RH20	MPS-190
RH25	MPS-191
RH30	MPS-192

HARDWARE LIST


No.	QTY	DESCRIPTION
A	21	1/4-20 x 3/4 BHCS
B	7	8-32 x 1/4 SHCS
C	14	1/4-20 x 1/2 SHCS
D	14	1/4-20 x 3/4 SHCS
E	14	10-32 x 3/16 BRASS TIPPED SHSS
F	4	1/4-20 x 1 SHCS
G	27	10-32 x 3/8 BHCS
H	4	5/16-18 x 1 5/8 SHCS
I	10	5/16 LOCK WASHER
J	4	5/16 HARDENED FLAT WASHER
K	4	1/4 LOCK WASHER
L	10	1/4-20 x 5/8 BHCS
M	9	1/4-20 x 1/2 BHCS
N	2	1/4-20 x 5/8 SHCS
O	6	5/16-18 x 1 BHCS
P	6	5/16 FLAT WASHER

C	CHANGE STOCK NUMBER	4855		12/00
B	ADD BT PIN BLOCKS	4568	N.M.	5/00
A	CHANGE TOOL TRAY CHART	4311	N.M.	12/99
REV.	DESCRIPTION OF CHANGE	E.C.O. No.	APP'D BY	DATE
MATERIAL/FINISH		 1400 MILL LANE 952-442-1410 WACONIA, MN 55387 USA		
STOCK/ASSY No.				
TOLERANCE UNLESS SPECIFIED		TITLE P+P ATC ASSEMBLY		
X.XXX	+/- .005	APPLICATION SOLID WAYS BED MILL		
X.XX	+/- .010	SCALE 12:1	DWG No. 6-10-032-014	SIZE B
X.X	+/- .030	DATE 18 OCT 99	DRAWN BY DAHLKE	SHEET No. 2 OF 2
ANGLE	+/- 1.0°			

Pick and Place Air Cylinder Assembly

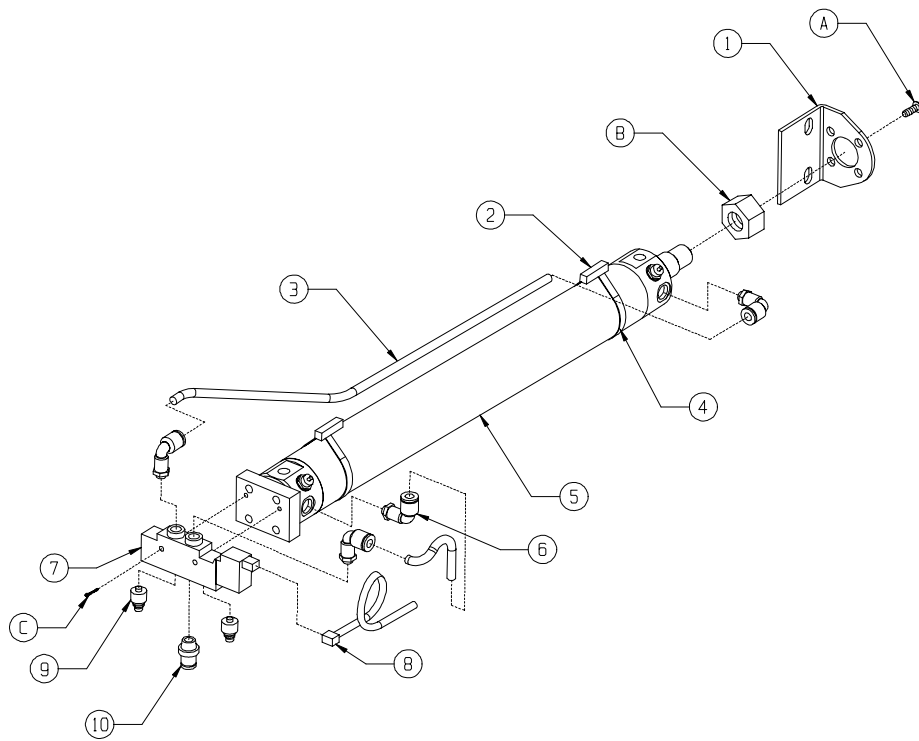

REV.	DESCRIPTION OF CHANGE	E.C.O. No.	APP'D BY	DATE
MATERIAL/FINISH		 1400 MILL LANE 612.442.1410 WACONIA, MN 55387 USA		
STOCK/ASSY No.				
TOLERANCE UNLESS SPECIFIED		TITLE NU-205 15" AIR CYLINDER ASSEMBLY		
		APPLICATION GENERAL PRODUCTS		
X .XXX +/-		SCALE 3.5:1	DWG No 6-10-018-082	SIZE B
X .XX +/-		DATE 02 DEC 99	DRAWN BY DAHLKE	SHEET No 1 OF 2
X .X +/-				
ANGLE +/-				

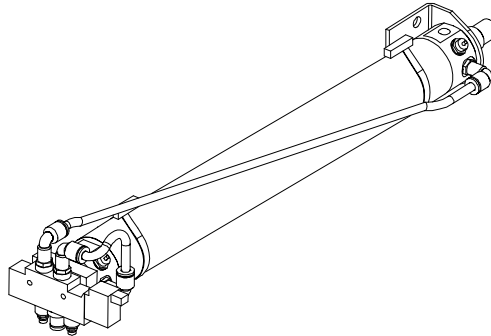

PARTS LIST


No.	QTY	STOCK No.	DESCRIPTION
1	1	BR-129	BRACKET FOOT MOUNT
2	2	SW-195	REED SWITCH
3	2'	NU-25	1/4" NYLON TUBING
4	2	SW-196	REED SWITCH BRACKET
5	1	NU-231	15" CYLINDER
6	4	NU-187	1/8 NPT 1/4 TUBE SWIVEL ELBOW FITTING
7	1	NU-230	2 POSITION 4 WAY VALVE
8	1	NU-229	DUST COVER AND CABLE FOR VALVE
9	2	NU-228	FLOW CONTROL VALVE W/SILENCER
10	1	NU-17	1/8 NPT 1/4 TUBE M/S

HARDWARE LIST

No.	QTY	DESCRIPTION
A	4	M6-1 x 15mm SHCS
B	1	7/16-20 HEX JAM NUT
C	2	M3-.5 x 20 mm SHCS

REV.	DESCRIPTION OF CHANGE	E.C.O. No.	APP'D BY	DATE
MATERIAL/FINISH		 1400 MILL LANE 612.442.1410 WACONIA, MN 55387 USA		
STOCK/ASSY No.				
TOLERANCE UNLESS SPECIFIED		TITLE NU-205 15" AIR CYLINDER ASSEMBLY		
X.XXX	+/-	APPLICATION GENERAL PRODUCTS		
X.XX	+/-	SCALE 3.5:1	DWG No. 6-10-018-082	SIZE B
X.X	+/-	DATE 02 DEC 99	DRAWN BY DAHLKE	SHEET No. 2 OF 2
ANGLE	+/-			

Table Guard Assembly

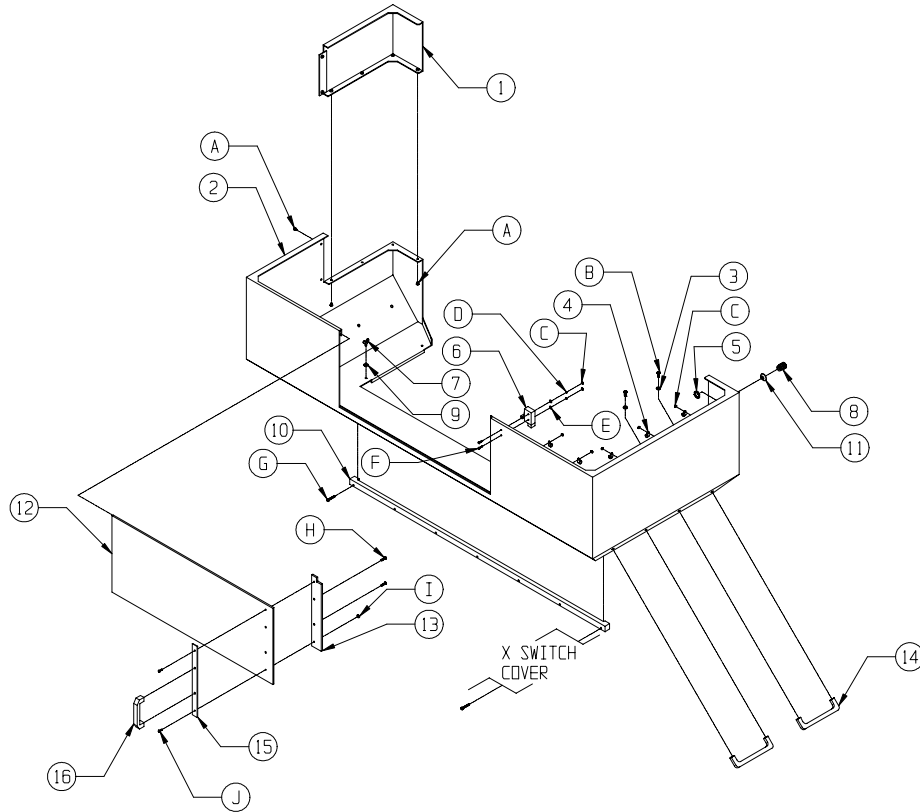

HARDWARE LIST

No.	QTY	DESCRIPTION
A	6	1/4-20 x 1/2 BHCS
B	8	M8-1.25 x 20mm BHCS
C	7	8-32 HEX NUT
D	2	#8 LOCK WASHER
E	2	#8 FLAT WASHER
F	2	8-32 x 1 1/4 BHCS
G	7	M6-1 x 50mm SHCS
H	2	1/4-20 x 1 BHCS
I	2	10-32 HEX NUT
J	2	10-32 x 5/8 BHCS

TABLE GUARD LIST


No.	QTY	MB/RH19	MB/RH20	MB/RH25	MB/RH30
1	1	N/A	MPS-179	MPS-220	MPS-217
2	1	MPS-222	MPS-177	MPS-219	MPS-216
10	1	MPS-223	MPS-178	MPS-221	MPS-218

PARTS LIST

No.	QTY	STOCK No.	DESCRIPTION
1	1	SEE TABLE	TABLE GUARD CORNER
2	1	SEE TABLE	TABLE GUARD
3	8	HD-80	M8 BONDED WASHER
4	5	WX-82	TIE DOWN
5	1	WX-96	1/2" LOCKING NUT
6	1	SW-194	LIMIT SWITCH
7	4	WX-284	WINGED THUMB SCREW
8	1	WX-23	1/2" CORD GRIP
9	4	HD-12	M6 BONDED WASHER
10	1	SEE TABLE	MOUNTING BAR
11	1	WX-38	1/2" O-RING
12	1	MPS-212	LEXAN DOOR
13	1	MPS-211	BACK DOOR PLATE
14	4	WX-230	DOOR HANDLE 8"
15	1	MPS-210	FRONT DOOR PLATE
16	1	WX-142	HANDLE

REV.	DESCRIPTION OF CHANGE	E.C.O. No.	APP'D BY	DATE
MATERIAL/FINISH				
STOCK/ASSY No.		1400 MILL LANE 952-442-1410 WACONIA, MN 55387 USA		
TOLERANCE UNLESS SPECIFIED		TITLE		
X.XXX	+/-	TABLE GUARD 2000		
X.XX	+/-	APPLICATION		
X.X	+/-	SOLID WAYS BED MILL		
ANGLE	+/-	SCALE 15:1		
DATE 30 MAY 00		DRAWN BY DAHLKE		SHEET No. 1 OF 1

Table Guard Assembly W/20 Pocket ATC

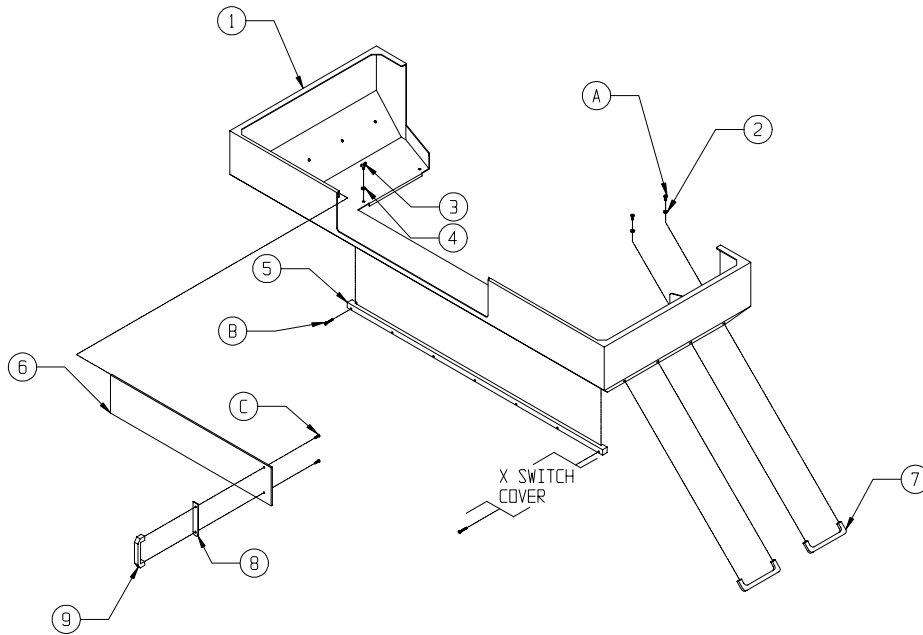

HARDWARE LIST

No.	QTY	DESCRIPTION
A	8	M8-1.25 x 20mm BHCS
B	7	M6-1 x 50mm SHCS
C	2	1/4-20 x 1 BHCS

TABLE GUARD LIST

No.	QTY	RH20	RH25	RH30
1	1	MPS-243	MPS-244	MPS-245
5	1	MPS-178	MPS-221	MPS-218


PARTS LIST

No.	QTY	STOCK No.	DESCRIPTION
1	1	SEE TABLE	TABLE GUARD
2	8	HD-80	M8 BONDED WASHER
3	4	WX-284	WINGED THUMB SCREW
4	4	HD-12	M6 BONDED WASHER
5	1	SEE TABLE	MOUNTING BAR
6	1	MPS-241	LEXAN DOOR
7	4	WX-230	DOOR HANDLE 8"
8	1	MPS-242	FRONT DOOR PLATE
9	1	WX-142	HANDLE

REV.	DESCRIPTION OF CHANGE	E.C.O. No.	APP'D BY	DATE
MATERIAL/FINISH				
STOCK/ASSY No.		1400 MILL LANE 952-442-1410 WACONIA, MN 55387 USA		
TOLERANCE UNLESS SPECIFIED		TITLE TABLE GUARD 2000 W/20 ATC		
X.XXX +/-		APPLICATION SOLID WAYS BED MILL		
X.XX +/-		SCALE 15:1		
X.X +/-		DATE 28 SEP 00		
ANGLE +/-		DRAWN BY DAHLKE		
		SHEET No. 1 OF 1		

Flood Coolant Valve Handle Assembly

THIS ASSEMBLY USED ON VM16, VM17, VM24, VM30, VMD30, & MC20

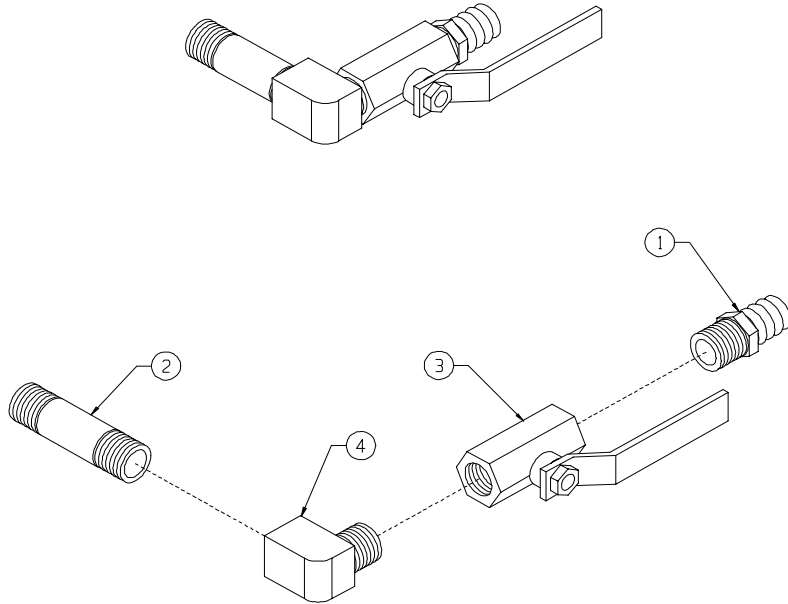

PARTS LIST

No.	QTY	STOCK No.	DESCRIPTION
1	1	NU-66	3/4" BARB FITTING
2	1	NU-257	3 IN. PIPE NIPPLE
3	1	NU-64	1/2" BRASS BALL VALVE
4	1	NU-125	STREET ELBOW

B	CHANGE PIPE NIPPLE	4778		11/00
A	CHANGE PIPE NIPPLE	3851	N. M.	2/99
REV.	DESCRIPTION	E.C.O. NO.	APP'D BY	DATE
MATERIAL/FINISH		 1400 MILL LANE 952-442-1410 WACONIA, MN 55387 USA		
STOCK/ASSY No.				
TOLERANCE UNLESS SPECIFIED		TITLE VM17 FLOOD HANDLE SUB-ASSEMBLY		
X. XXX ±		APPLICATION PARTNER I		
X. XX ±		SCALE 2:1	ENG No 6-10-008-039	SIZE B
X. X ±		DATE 29 APR 97	DRAWN BY THOMPSON	SHEET NO. 1 OF 1
ANGLE ±				

Lubrication Specifications

USE MOBILITH AW SERIES MULTIPURPOSE EP GREASE OR OTHER EQUIVALENT FOR ALL LUBE POINTS.

MOBILITH AW SERIES, MULTIPURPOSE EP GREASE	
PRODUCT NUMBER	64352-8
NLGI GRADE	1
COLOR	GREEN
STRUCTURE	SMOOTH/TACKY
SOAP TYPE	LITHIUM COMPLEX
MINERAL OIL VISCOSITY	
cST AT 40°C	150
cST AT 100°C	13
SUS AT 100°F	750
SUS AT 210°F	70
ISO VISCOSITY GRADE	150
PENETRATION AT 23°C (77°F), WORKED	325
DROPPING POINT, ASTM D 2265, °F	475
TIMKEN OK LOAD, ASTM D 2509, lb	40
FOUR-BALL EP TEST, ASTM D 2596,	
WELD LOAD, kg	250
LOAD WEAR INDEX	40
FOUR-BALL WEAR TEST, ASTM D 2266,	
SCAR DIAMETER, mm, MAX	0.5
CORROSION PREVENTION, ASTM D 1743	PASS
WHEEL BEARING TEST, ASTM D 4290	
MODIFIED, LEAKAGE, GRAM	5

MACHINES WITH AUTOLUBE OPTION USE MOBIL OIL VACTRA 2, AMOCO WAYTAC No. 68, SUNOCO SUNWAY LUBE No. 1180, OR EQUIVALENT QUALITY WAY OIL.

MOBIL VACTRA OIL No. 2	
PRODUCT NUMBER	60049-4
SPECIFIC GRAVITY, 60/60F	0.88
POUR POINT, °C (°F), max.	-9 (16)
FLASH POINT, °C (°F), min.	244 (472)
VISCOSITY	
cST AT 40°C	68
cST AT 100°C	8.6
SUS AT 100°F	356
SUS AT 210°F	55
VISCOSITY INDEX	97
ISO VG	68
COLOR, ASTM D 1500	4
FZG, PASS STAGES	11
4 BALL WELD, kg, ASTM D 2783	160
4 BALL WEAR, mm, ASTM D 4172	0.22
COPPER CORROSION, ASTM D 130	1B
RUST, D665A	PASS
VICKERS V-104C, ng D 2882 (MOD)	-
CMCD, P-SPEC, APPROVAL	P-47
BIJUR PT 37-1 APPROVAL	PASS
OKUMA APPROVAL	PASS

MACHINES WITH 15,000 RPM AIR/OIL OPTION USE MOBIL OIL DTE 24, OR EQUIVALENT QUALITY SPINDLE OIL.



MOBIL DTE 24	
PRODUCT NUMBER	60262-3
98 CMCS CODE (DRUM)	98020E
SPECIFIC GRAVITY	0.871
POUR POINT, °C (°F), max	-18 (0)
FLASH POINT, °C (°F), min	200 (392)
VISCOSITY	
cST AT 40°C	32
cST AT 100°C	5.3
SUS AT 100°F	165
SUS AT 210°F	44
ISO VISCOSITY GRADE	32
VISCOSITY INDEX	95
RUST PROTECTION,	PASS
ASTM D 665, A & B	
COLOR, ASTM D1500, max	3.5
FZG GEAR TEST STAGES	12
PASSED DIN 51534	

CLEAN AND FILL AIR FILTER / REGULATOR / OILER EVERY WEEK FOR PROPER OPERATION OF ALL PNEUMATIC PARTS. FILL WITH MOBIL VELOCITE No. 10 OR OTHER EQUIVALENT QUALITY AIR TOOL OIL.

MOBIL VELOCITE OIL No. 10	
PRODUCT NUMBER	60068-4
GRAVITY, API	32.0
POUR, °C (°F), max.	-4 (25)
FLASH, °C (°F), min.	182 (360)
VISCOSITY	
cST AT 40° C	22.0
cST AT 100° C	4.0
SUS AT 100° F	115
SUS AT 210° F	40
ISO VG	22
VISCOSITY INDEX	95
COLOR, ASTM D 1500	2.0
RUST PROTECTION, ASTM D 665	PASS
CINCINNATI MILACRON SPECIFICATION	P-45

REV.	DESCRIPTION	E.C.D. NO.	APP'D BY	DATE
1	MB/RH LUBRICATION DRAWING	SCALE 15:1	ENG No. 6-10-032-016	SIZE B
	APPLICATION SOLID WAYS BED MILL	DATE 20 SEP 00	DRAWN BY DAHLKE	SHEET NO. 1 OF 1

Retention Knob Chart
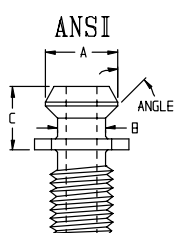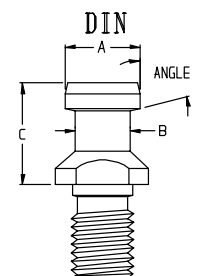
<i>ANSI RETENTION KNOBS STYLE V-FLANGE 50 TAPER</i>									
RET. KNOB ASSEMBLY SELECTION	DIMENSIONS				MILLTRONICS MACHINE	COMMAND PART No.	KENNAMETAL PART No.	VALENITE PART No.	LYNDEX PART No.
N/A	1.14	.83	1.00	45°	RW30B	RC6E-0001	DWG RK11144	N/A	C50-STD
<i>ANSI RETENTION KNOBS STYLE BT-FLANGE 50 TAPER</i>									
RET. KNOB ASSEMBLY SELECTION	DIMENSIONS				MILLTRONICS MACHINE	COMMAND PART No.	KENNAMETAL PART No.	VALENITE PART No.	LYNDEX PART No.
N/A	1.14	.83	1.00	45°	RW30B	RS6M-0105	DWG RK11144A	N/A	N/A
<i>ANSI RETENTION KNOBS STYLE V-FLANGE 40 TAPER</i>									
RET. KNOB ASSEMBLY SELECTION	DIMENSIONS				MILLTRONICS MACHINE	COMMAND PART No.	KENNAMETAL PART No.	VALENITE PART No.	LYNDEX PART No.
4836	.74	.49	.64	45°	RH20F, RH25D, RH30D, BR50C, BR60C, BR80C VM16G, VM17E, VMG17D, VM24E, VMG24B, VM25C, VM30F, VMD30E	RC4E-0001	RK11122	PT-475C	C40-STD
<i>ANSI RETENTION KNOBS STYLE BT-FLANGE 40 TAPER</i>									
RET. KNOB ASSEMBLY SELECTION	DIMENSIONS				MILLTRONICS MACHINE	COMMAND PART No.	KENNAMETAL PART No.	VALENITE PART No.	LYNDEX PART No.
4837	.74	.49	.75	45°	RH20F, RH25D, RH30D, BR50C, BR60C, BR80C VM16G, VM17E, VMG17D, VM24E, VMG24B, VM25C, VM30F, VMD30E	RS4M-0115	RK11126A	N/A	B40-FADAL
<i>DIN 69872 RETENTION KNOBS STYLE V-FLANGE 40 TAPER</i>									
RET. KNOB ASSEMBLY SELECTION	DIMENSIONS				MILLTRONICS MACHINE	COMMAND PART No.	KENNAMETAL PART No.	VALENITE PART No.	LYNDEX PART No.
4838	.75	.55	1.02	75°	RH20F, RH25D, RH30D, BR50C, BR60C, BR80C VM16G, VM17E, VMG17D, VM24E, VMG24B, VM25C, VM30F, VMD30E	RS4E-0114-C	DWG RK71125	N/A	C40-1500
<i>DIN 69872 RETENTION KNOBS STYLE DIN-FLANGE 40 TAPER</i>									
RET. KNOB ASSEMBLY SELECTION	DIMENSIONS				MILLTRONICS MACHINE	COMMAND PART No.	KENNAMETAL PART No.	VALENITE PART No.	LYNDEX PART No.
4839	.75	.55	1.02	75°	RH20F, RH25D, RH30D, BR50C, BR60C, BR80C VM16G, VM17E, VMG17D, VM24E, VMG24B, VM25C, VM30F, VMD30E	RS4M-0114-C	DWG RK71124	N/A	B40-1500
 									
D	ADD RH/RW12 & RH19						5146		09/01
C	ADD RETENTION KNOBS TO CHART						4859	N.M.	12/00
B	CHANGE 70mm BT-FLANGE CHART						4730	N.M.	10/00
A	ADD LYNDEX CORP. IN CHART						4351	N.M.	1/00
REV.	DESCRIPTION						E.C.O. NO.	APP'D BY	DATE
							SCALE 1:1	DWG No. 6-11-018-054	SHEET B
	APPLICATION GENERAL PRODUCTS						DATE 30 APR 99	DRAWN BY DAHLKE	SHEET NO. 1 OF 2

MAS RETENTION KNOBS STYLE V-FLANGE 40 TAPER

RET. KNOB ASSEMBLY SELECTION	A	B	C	ANGLE	MILLTRONICS MACHINE	COMMAND PART No.	KENAMETAL PART No.	VALENITE PART No.	LYNDEX PART No.
4831	.59	.39	1.27	45°	RH20F, RH25D, RH30D, BR50C, BR60C, BR80C, RW20A*, VM16G, VM17E, VMG17D, VM24E, VMG24B, VM25C, VM30F, VMD30E	RB4E-0001	RK31114	PT-532-45	C40-4500

MAS RETENTION KNOBS STYLE BT-FLANGE 40 TAPER

RET. KNOB ASSEMBLY SELECTION	A	B	C	ANGLE	MILLTRONICS MACHINE	COMMAND PART No.	KENAMETAL PART No.	VALENITE PART No.	LYNDEX PART No.
4832	.59	.39	1.38	45°	RH20F, RH25D, RH30D, BR50C, BR60C, BR80C, RW20A*, VM16G, VM17E, VMG17D, VM24E, VMG24B, VM25C, VM30F, VMD30E	RB4M-0001	RK31113	PT-444-45	B40-4500


MAS RETENTION KNOBS STYLE V-FLANGE 40 TAPER

RET. KNOB ASSEMBLY SELECTION	A	B	C	ANGLE	MILLTRONICS MACHINE	COMMAND PART No.	KENAMETAL PART No.	VALENITE PART No.	LYNDEX PART No.
4833	.59	.39	1.27	60°	RH12, RH19, RH20F, RH25D, RH30D, RW12, BR50C, BR60C, BR80C, VM16G, VM17E, VMG17D, VM24E, VMG24B, VM25C, VM30F, VMD30E	RB4E-0002	RK31114A	PT-532-60	C40-6000

MAS RETENTION KNOBS STYLE BT-FLANGE 40 TAPER

RET. KNOB ASSEMBLY SELECTION	A	B	C	ANGLE	MILLTRONICS MACHINE	COMMAND PART No.	KENAMETAL PART No.	VALENITE PART No.	LYNDEX PART No.
4834	.59	.39	1.38	60°	RH12, RH19, RH20F, RH25D, RH30D, RW12, BR50C, BR60C, BR80C, VM16G, VM17E, VMG17D, VM24E, VMG24B, VM25C, VM30F, VMD30E	RB4M-0002	RK31113A	PT-444-60	B40-6000

NOTES:

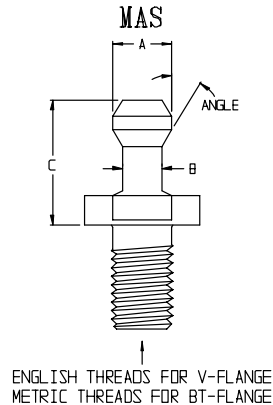

1. FOR SPINDLES OF 8000 RPM AND GREATER YOU MUST USE BALANCED TOOLING TO A G2.5 SPEC. OR IT WILL VOID THE SPINDLE WARRANTY.
 2. CHART IS GOOD FOR ALL MACHINE VERSIONS LISTED AND ALL FUTURE VERSIONS.
 3. COMMAND CORPORATION
TEL: 1-800-328-2197
FAX: 1-763-576-6911
 4. KENAMETAL
TEL: 1-800-446-7738
FAX: 1-800-962-4910
 5. VALENITE
TEL: 1-800-544-3336
FAX: 1-800-488-0695
 6. LYNDEX CORPORATION
TEL: 1-800-543-6237
FAX: 1-847-509-2909
- * RW20 ONLY COMES WITH ONE RETENTION KNOB. NO RETENTION KNOB ASSEMBLY SELECTION IS USED.

D	ADD RH/RW12 & RH19	5146		09/01
C	ADD RETENTION KNOBS TO CHART	4859	N.M.	12/00
B	CHANGE 70mm BT-FLANGE CHART	4730	N.M.	10/00
A	ADD LYNDEX CORP. IN CHART	4351	N.M.	1/00
REV.	DESCRIPTION	E.C.O. NO.	APP'D BY	DATE
	TITLE	SCALE	DATE	SHEET
	RETENTION KNOB CHART	1:1	30 APR 99	2 OF 2
	APPLICATION	GENERAL PRODUCTS	DRAWN BY	SHEET NO.
			DAHLKE	

Maintenance Section

Adjusting Table Gib

The table gibs adjusting screw is on the left side. To take up the gib, tighten the large screw slightly until a slight drag is felt when moving the table by hand. (Fig. 1)

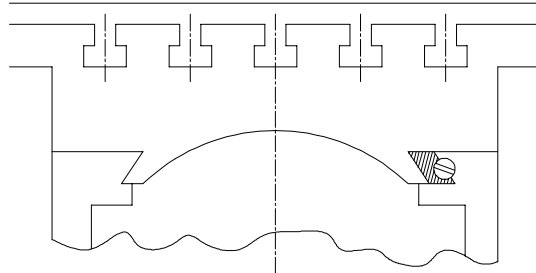


Fig. 1
Table-saddle gib

Adjustment of Saddle Gib

Tighten gib using the same method as above however, the chip wiper must be removed first. (Fig. 2)

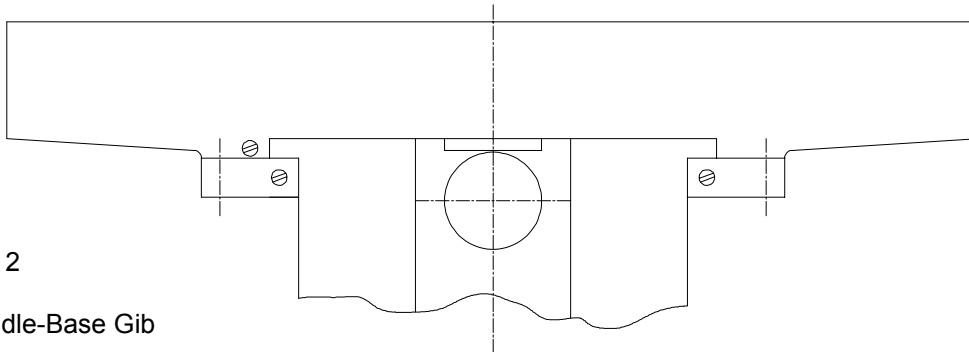


Fig. 2
Saddle-Base Gib

Adjustment of head Bolster gib.

Remove Chip wiper and adjust screw until smooth movement is attained. (Fig. 3)

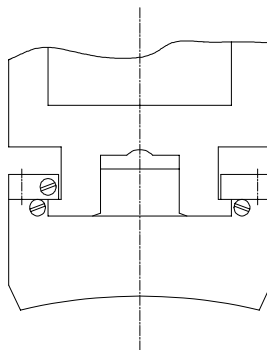


Fig. 3
Bolster Gib

Checking and Adjusting Backlash

Use a good solid magnetic base and a .0005 Inch indicator. Install the magnetic base on the machine table in close proximity to the spindle. Clean the area that the indicator will be in contact with.

Go into PARAMETERS/AXIS arrow down to BACKLASH press F1 EDIT and set X, Y and Z to zero. *(Before setting them to zero note original settings)*

Find the high spot on the spindle by moving the indicator back and forth and set indicator to zero. *(See point a on Fig. 4)*

The next step is easiest if done in jog mode. *(Select distance and 1 inch increments)*
You may have to press the jog key several times for the desired direction to clear the spindle.

Press the jog key for the desired direction for **A** to move towards **D** (see Fig. 4) and then back to **A**, the indicator may have moved, adjust it back to zero and repeat this step until it stays at zero.

Jog the desired axis or tool (see Fig. 4) from point **A** to **B** to **C** back to **B** then back to the start point **A**. The reading on the indicator is backlash and should be put into the backlash parameter under PARAMS-SETUP-AXIS.

After putting the backlash into the table, repeat the procedure to ensure the numbers took affect. If the indicated error seems to increase this is addlash, and you may have to subtract the indicated number from the backlash chart.

The X axis procedure is *shown, repeat procedure for Y and Z*.
Remember to save these new changes to your parameter disk.

(The diagram below is an example of checking your backlash in the X-axis.)

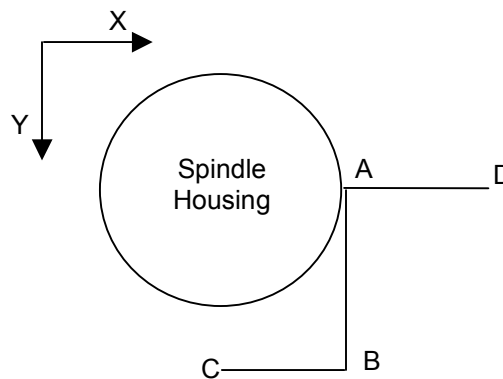



Fig. 4

Procedure to adjust CESD (MA-219) Lubrication Unit

As long as the machine is “reset”, the oiler will be pumping. In the event that the tank falls below the **MIN** line on the tank an audible alarm will sound. The machine will not let a program start with a low lube alarm (**451 Low Lube Fault**)

The **MA-219** has the ability to set the time between each pump cycle. It will pump the same amount of way lube (**.13 Liters/Min**) each pump cycle. We are not varying the amount of oil but the interval between each pump cycle. A new machine shipped from Milltronics will have the oiler pumping Aprox. 5 seconds every 25 to 30 minutes. Adjusting the Seconds knob (left) will change the length of time in seconds the pump cycle for (.13 Liters/Min). Adjusting the Minute knob (right) will change the time between each pump interval. It will always pump the same amount

To adjust the intervals between each cycle of the pump:
Remove the 4 screws holding the top cover.
Adjust the two knobs shown below.
The dials are very sensitive. Turn them very slowly.

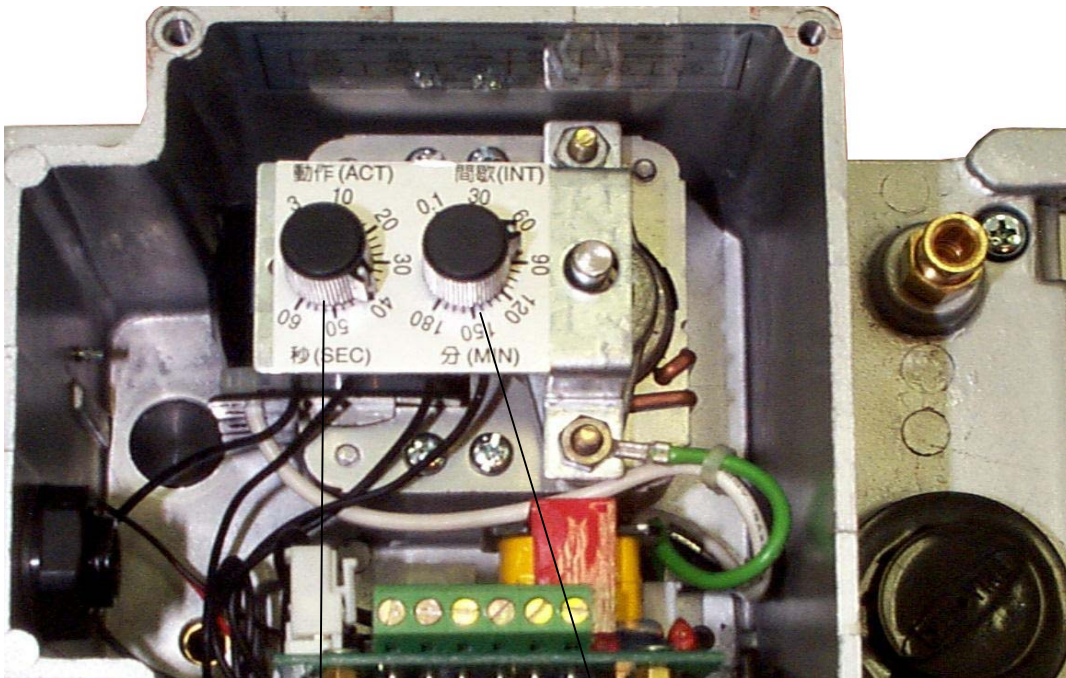

Turn this dial to vary the seconds that it pumps for each minute interval.

Turn this dial to vary the minutes between each pump cycle.

Adjusting tool change position

Optional Pick-N-Place tool changer (RH models only)



Pick-n-Place tool changers may need periodic mechanical adjustment. The lock nut located on the end of the arm in/out actuator can come loose. If the nut comes loose the tool change position can shift and cause rough operation.

Before performing the procedure below, check to make sure the lock nut is still tight.

- Step 1.** Command **MDI T0M6**
- Step 2.** Remove tool from pocket #1 on the Pick-N-Place unit
- Step 3.** Command **MDI G32**
- Step 4.** Manually insert a tool into spindle
- Step 5.** Command Spindle Orient **MDI M19**
- Step 6.** Command Arm Out **MDI M23**
- Step 7.** Using the Handwheel, line up the tool in the spindle to pocket #1 on the Pick-N-Place unit.
- Step 8.** When everything is lined up (X, Y and Z)
- Step 9.** From the Main Menu, press the following keys: Utility F10/Parameters F10/Setup F1/Level F1/Validation Code: PROTO3 press [enter] key Access Level 3/Axis cursor down to Tool Change then press the **Edit** key
- Step 10.** On the bottom F keys you will find: **MACH** press it and it will load in the current X, Y and Z positions.
- Step 11.** Manually remove tool from the spindle
- Step 12.** Command Arm Out **M24**
- Step 13.** Command **T2M6** to check tool changer function

If the tool change ran smoothly, the procedure is complete.

If it's still out of position repeat this procedure.

Spindle Start up Procedure (Excludes MB models)

04-12-02

Daily Run in procedure

1. Start the flood pump or chiller unit (if equipped) and run coolant throughout coolant passages until the temperature stabilizes.
2. Verify that all auxiliary systems are operating properly.
 - a. If equipped with a Spindle air purge system, the system should have approx. 15 PSI.
 - b. If equipped with the optional Vogel Air Oiler System, verify the reservoir tank has adequate oil supply and proper air pressure.

3. Run-in the spindle at 50% of the maximum RPM for 10 minutes.

Measure temperature at various locations on the front of the spindle cartridge.

Be careful as the spindle is running! If at any time during the spindle run-in procedure the temperature reaches 140 degrees Fahrenheit or 60 degrees Celsius, stop the spindle and allow it to cool to room temperature. Resume the procedure at the point of the procedure it was halted.

The temperature can be measured with a pyrometer. If a pyrometer is not available, a good indication of excessive temperature is if you cannot hold your hand on the spindle for more than 5 seconds.

4. If the temperature is within normal operation parameters, the machine is ready for operation.

Abbreviated Run-in Procedure for Spindle with ½ -2 hours Idle time

1. Follow Steps 1. and 2. listed under the Daily Run-in Procedure.
2. Run-in the spindle at 50% of the maximum RPM for 3 to 5 minutes.
3. Monitor the temperature at various locations on the front of the spindle cartridge. If at any time during the spindle run-in procedure the temperature reaches 140 degrees Fahrenheit or 60 degrees Celsius, stop the spindle and allow it to cool to room temperature. Resume the procedure at the point of the procedure it was halted.
4. If the temperature is within normal operation parameters, the machine is ready for operation.